SAMSUNG

# HW-J8501

**User manual**

# Curved Soundbar

## Imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at
www.samsung.com/register

# FEATURES

### Immersive Surround Sound from 9.1Ch

Great TVs require great sound. The Curved Soundbar gives your curved TV an even more powerful sound experience with 350 watts of amazing 9.1Ch surround sound. Speakers on both sides expand the optimal listening area, enhancing the surround sound effect to provide you with a more layered and immersive listening experience.

### Streaming Music Services

The Curved Soundbar makes diving into all your favourite music easier than ever before, thanks to its Wi-Fi capabilities. Simply access the Samsung Multiroom App to experience the best of the internet's subscription streaming music services.

### TV SoundConnect

Connect your TV and Soundbar easily through Bluetooth with TV SoundConnect. The absence of trailing wires between the Soundbar and TV allows you to showcase the slim and sleek design of both systems, while maintaining a clean look in your living environment. Easily control the Soundbar and TV from a single TV remote.

### Music Source Sharing (= Multiroom Play)

Controlling and sharing one music source across multiple audio devices in various locations is made easy with Multiroom Link. The mobile app remotely controls volume and music on your system across different devices, including your TV, Soundbar, Home Entertainment System and Blu-ray Disc Player. Enjoy the audio you want, where you want.

### HDMI

HDMI transmits video and audio signals simultaneously, and provides a clearer picture.
The unit is also equipped with the ARC function which lets you listen to sound from your TV through the Soundbar via an HDMI cable. This function is only available if you connect the unit to an ARC compliant TV.

### USB Host Support

You can connect and play music files from external USB storage devices such as MP3 players, USB flash memory, etc. using the Soundbar's USB HOST function.

### Bluetooth Function

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

## LICENCES

DOLBY DIGITAL

Manufactured under Licence from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

dts 2.0 Channel

For DTS patents, see http://patents.dts.com. Manufactured under licence from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0 Channel is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

# SAFETY INFORMATION

## SAFETY WARNINGS

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK).
NO USER-SERVICEABLE PARTS ARE INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

| | |
|---|---|
| | This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury. |
| | This symbol indicates important instructions accompanying the product. |

**WARNING** : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION** : TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

- This apparatus shall always be connected to a AC outlet with a protective grounding connection.
- To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

**CAUTION**

- Do not expose this apparatus to dripping or splashing. Do not put objects filled with liquids, such as vases on the apparatus.
- To turn this apparatus off completely, you must pull the power plug out of the wall socket. Consequently, the power plug must be easily and readily accessible at all times.

# PRECAUTIONS

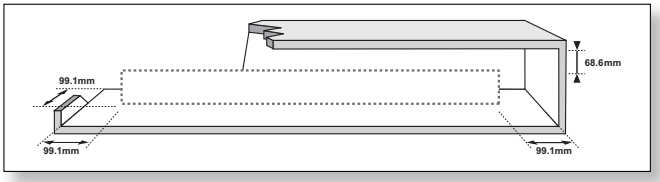


Ensure that the AC power supply in your house complies with the power requirements listed on the identification sticker located on the back of your product. Install your product horizontally, on a suitable base (furniture), with enough space around it for ventilation (7~10 cm). Make sure the ventilation slots are not covered. Do not place the unit on amplifiers or other equipment which may become hot. This unit is designed for continuous use. To fully turn off the unit, disconnect the AC plug from the wall outlet. Unplug the unit if you intend to leave it unused for a long period of time.

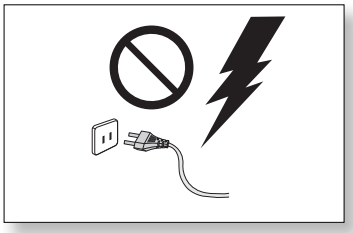

During thunderstorms, disconnect the AC plug from the wall outlet. Voltage peaks due to lightning could damage the unit.

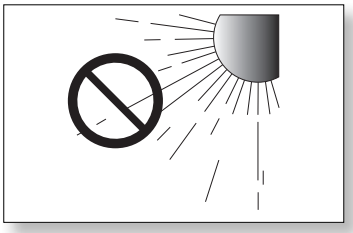

Do not expose the unit to direct sunlight or other heat sources. This could lead to overheating and cause the unit to malfunction.

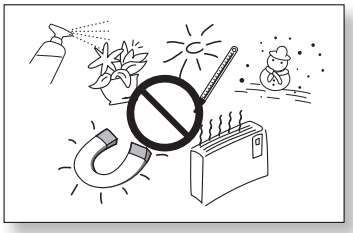

Protect the product from moisture (i.e. vases), and excess heat (e.g. a fireplace) or equipment creating strong magnetic or electric fields. Disconnect the power cable from the AC supply if the unit malfunctions. Your product is not intended for industrial use. It is for personal use only. Condensation may occur if your product has been stored in cold temperatures. If transporting the unit during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

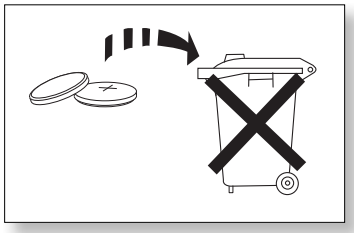

The batteries used with this product contain chemicals that are harmful to the environment. Do not dispose of batteries in the general household trash. Do not dispose of batteries in a fire. Do not short circuit, disassemble, or overheat the batteries. There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING, DO NOT INGEST BATTERY, CHEMICAL BURN HAZARD, The remote control supplied with this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

# CONTENTS


## 2 GETTING STARTED

**2 Features**
**3 Safety Information**
**6 What's Included**

## 7 DESCRIPTIONS

**7 Top / Front Panel**
**8 Rear / Bottom Panel**
**9 Remote Control**

## 11 INSTALLATION

**11 Installing Soundbar**
11 Installing both Soundbar and TV to the Wall Mount Type
13 Installing Soundbar to TV Stand
14 Installing Soundbar to Free-Standing
**15 Assembling the Clamp-Wire**
**15 Mounting the Cover-Foot onto Subwoofer**

## 16 CONNECTIONS

**16 Connecting the Subwoofer**
**18 Connecting to a TV**
18 Connections with TV Using HDMI (Digital) Cable
18 Connections with TV Using Optical (Digital) Cable
19 TV SoundConnect
**21 Connections with External Device**
21 HDMI Cable
21 Optical or AUX Cable
22 USB

## 24 FUNCTIONS

**24 Input Mode**
**25 Bluetooth**
**27 Using the Network Standby On Function**
**27 Using the Multiroom Link**
**29 Software Update**

## 31 TROUBLESHOOTING

**31 Troubleshooting**

## 32 APPENDIX

**32 Specifications**


Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

ENG

# WHAT'S INCLUDED

## BEFORE READING THE USER'S MANUAL

Note the following terms before reading the user manual.

### ► Icons used in this manual

| Icon | Term | Definition |
|---|---|---|
| | **Caution** | Indicates a situation where a function does not operate or settings may be cancelled. |
| | **Note** | Indicates tips or instructions on the page that help you operate a function. |

Check for the supplied accessories shown below.

**Main Unit**

**Remote Control / Lithium Battery (3V : CR2032)**

**Power Cord**

**DC Adapter**



**HDMI Cable**

**USB Cable**

**USB Converter**



**Clamp-Wire**



**User Manual**

**Holder-Fix Mount**



**TV-Mount**

**Holder-Screw 1 : 4EA**

**Holder-Screw 2 : 8EA**

**Subwoofer**

**Power Cord**

**Cover-Foot : 4EA**

**Screw-Taptite : 4EA**

**Foot Rubber : 4EA**

- The appearance of the accessories may differ slightly from the illustrations above.
- Use the dedicated USB cable to connect external USB devices to the unit.

# TOP / FRONT PANEL

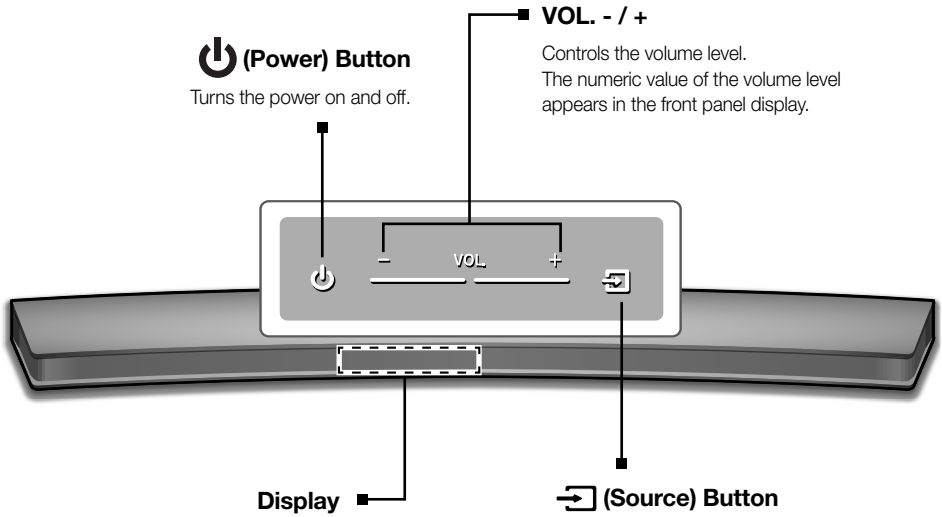
VOL. - / +
Controls the volume level.
The numeric value of the volume level appears in the front panel display.
(Power) Button
Turns the power on and off.
VOL
Display
Displays the current mode.
(Source) Button
Selects the D.IN, AUX, HDMI, BT, TV, or USB input.
While the unit is powered on, pressing the (Source) button for more than 3 seconds sets the button to act as the (Mute) button. To cancel the (Mute) button setup, press the (Source) button for more than 3 seconds again.

- To clean this apparatus, unplug the power cord from the wall outlet and wipe the product using a soft, dry cloth. Due to aluminum being a positive electrostatic material, static discharge may occur.

- When you plug in the AC cord, the power key will work in 4 to 6 seconds.
- When you turn on this unit, there will be a 4 to 5 second delay before it produces sound.
- If you want to enjoy the sound only from the Soundbar, you must turn off the TV's speakers in the Audio Setup menu of your TV. Refer to the owner's manual supplied with your TV.

# REAR / BOTTOM PANEL

**OPTICAL IN (D.IN)**

Connect to the digital (optical) output of an external device.

**HDMI OUT (TV-ARC)**

Outputs digital video and audio signals simultaneously using an HDMI cable.

**HDMI IN**

Inputs digital video and audio signals simultaneously using an HDMI cable. Use when connecting a supported external device.

**LAN**

Lets you connect to a network using a LAN cable.

**AUX IN**

Connect to the Analogue output of an external device.

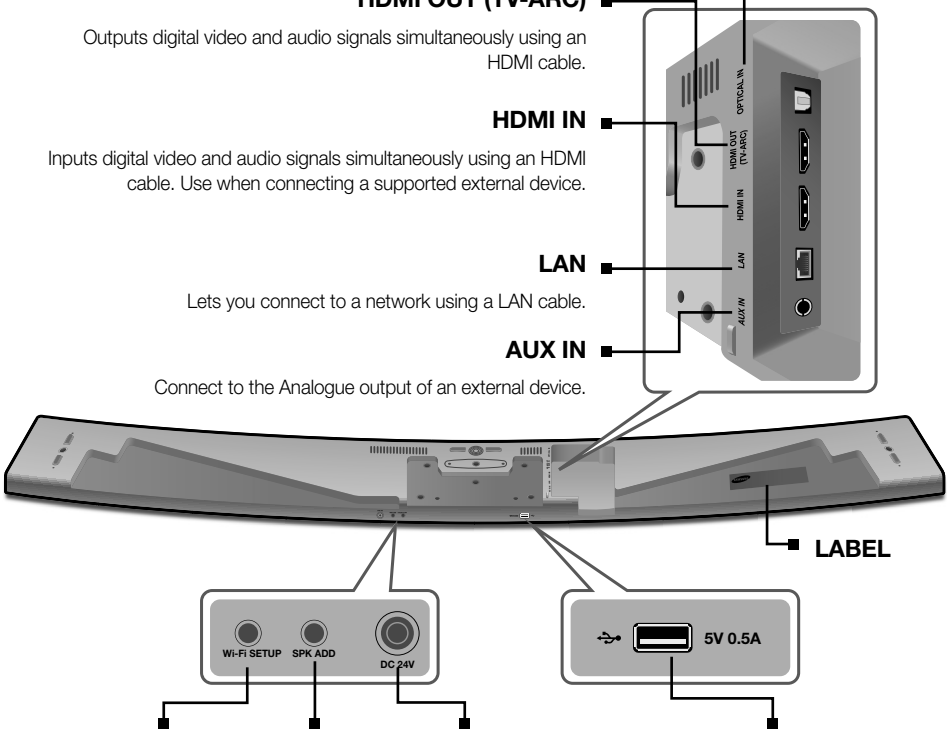


**Wi-Fi SETUP**

Press this button to connect your Soundbar to your network using Wi-Fi setup.

**SPK ADD**

Press the button to connect Soundbar to the HUB.
(not supplied)

**DC 24V (Power Supply In)**

Connect the DC power adaptor to the power supply jack, and then connect the AC power adaptor plug to a wall outlet.

**(USB Port)**

Connect USB devices here to play files on the devices.

- When disconnecting the power cable of the AC power adaptor from a wall outlet, pull the plug. Do not pull the cable.
- Do not connect this unit or other components to an AC outlet until all connections between components are complete.

# REMOTE CONTROL



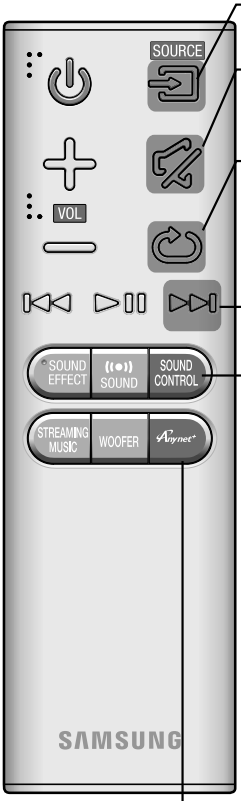


**SOURCE**

Press to select a source connected to the Soundbar.

**Mute**

You can turn the volume down to 0 with the push of a button.
Press again to restore the sound to the previous volume level.

**Repeat**

Press to set the Repeat function during music playback from a USB device.

**OFF - REPEAT** : Cancells Repeat Playback.

**TRACK - REPEAT** : Repeatedly play a track.

**ALL - REPEAT** : Repeatedly play all tracks.

**RANDOM - REPEAT** : Plays tracks in random order.
(A track that has already been played may be played again.)

**Skip Forward**

If there is more than one file on the device you are playing, and you press the ▶▶| button, the next file is selected.

**SOUND CONTROL** (* Use the |◀◀, ▶▶| buttons to adjust level.)

Press to select **TREBLE**, **BASS**, or **AUDIO SYNC**. Then, use the |◀◀, ▶▶| buttons to adjust the Treble, Bass volume from -3 to +3.

Press and hold the **SOUND CONTROL** button for about 5 seconds to adjust the sound for each frequency band. 150Hz, 300Hz, 600Hz, 1.2KHz, 2.5KHz, 5KHz, and 10KHz are selectable and each can be adjusted to a setting between -6 and +6.

If the Soundbar is connected to a digital TV and the video appears out of sync with the audio, press the **SOUND CONTROL** button to sync the audio with the video. Use the |◀◀, ▶▶| buttons to set the audio delay between 0 ms and 300 ms. In USB mode, TV mode, and BT mode, the Audio Sync function may not available.

**Anynet+**

Press the **Anynet+** button to turn the Anynet+ function on or off.
(Default : Auto Power Link OFF, **ON - ANYNET+** / **OFF - POWER LINK** or **OFF - ANYNET+** / **ON - POWER LINK**). The Anynet+ function lets you control the Soundbar with the remote from an Anynet+ compatible Samsung TV. The Soundbar must be connected to the TV via an HDMI cable.

* Auto Power Link
Synchronizes the Soundbar to a connected Optical source via the Optical jack so it turns on automatically when you turn on your TV. (See page 19)

You can also activate **Wi-Fi SETUP** function by pressing and holding **Anynet+** button on the remote for over 7 seconds.

- Soundbar is a Samsung proprietary name.
- Operate the TV using the TV's remote control.

**Power**

Turns the Soundbar on and off.

**Volume**

Adjusts the volume level of the unit.

**Play / Pause**

Press the ▶II button to pause the playing of a file temporarily.
Press the ▶II button again to play the selected file.

**Skip Back**

If there is more than one file on the device you are playing, and you press the I◀◀ button, the previous file is selected.

**SOUND EFFECT**

You can select the sound modes - **STANDARD (Original Sound)**, **MUSIC**, **CLEAR VOICE**, **SPORTS**, **MOVIE**, and **NIGHT MODE** - depending on the content you want to listen to.

Select the **STANDARD** mode if you want to enjoy the original sound.

**((●)) SOUND**

Surr.Sound adds depth and spaciousness to the sound. Pressing the **((●)) SOUND** button repeatedly cycles through the Surr.Sound settings : **ON - SURROUND SOUND**, **OFF - SURROUND SOUND**

**STREAMING MUSIC**

Press **STREAMING MUSIC** button to listen to an Internet radio station. Each time you press this button, the Soundbar switches to the next default station, cycling through the 3 default stations.

To use the **STREAMING MUSIC** function, the soundbar must be connected to the network. (See page 27)

**DRC (Dynamic Range Control) ***

Lets you apply dynamic range control to Dolby Digital, Dolby Digital Plus, and Dolby TrueHD audio.

Press and hold the **STREAMING MUSIC** button, then the DRC (Dynamic Range Control) function toggles between **ON** and **OFF**.

**WOOFER** (* Use the I◀◀,▶▶I buttons to adjust woofer volume.)

Press the **WOOFER** button. Then, use the I◀◀,▶▶I buttons to adjust Subwoofer volume from -12, -6 to +6.

You can also activate **SPK ADD** function of the soundbar by pressing and holding **WOOFER** button of the remote for over 5 seconds.

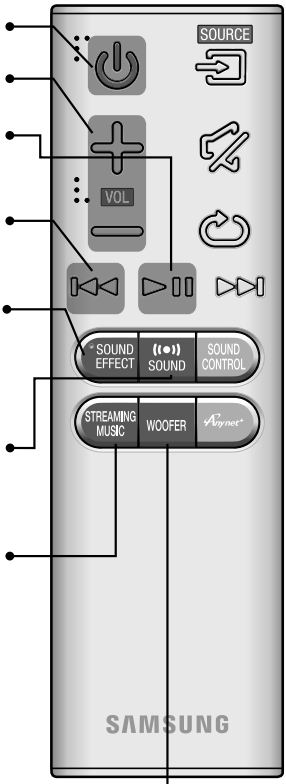


## INSTALLING THE BATTERY IN THE REMOTE CONTROL

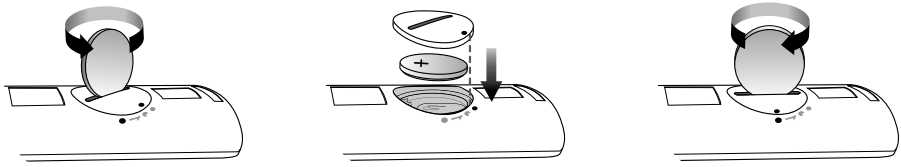

1. Use a suitable coin to turn the remote control's battery cover counterclockwise to remove it as shown in the figure above.
2. Insert a 3V lithium battery. Keep the positive (+) pole facing up when inserting the battery. Put the battery cover on and align the '●' marks side by side as shown in the figure above.
3. Use a suitable coin to turn the remote control battery cover clockwise as far as it will go to fix it in place.

# INSTALLING SOUNDBAR



## INSTALLING BOTH SOUNDBAR AND TV TO THE WALL MOUNT TYPE

- This model corresponds to the 2015 Samsung curved TV S9000/S9500 - 65"/78". Please refer to the home page of Samsung Electronics to see the detail list of corresponding models.
- To mount both of a soundbar and the TV using the wall mount, make sure to mount the soundbar onto the TV first, then mount the TV.
- To mount the TV on the wall, refer to the user's manual enclosed with the TV you purchased.
- This model is shipped while **Holder-Foot** and **Holder-Support** are attached to the Soundbar.
- This Soundbar cannot be installed to a non-compatible TV, in either form of TV mount or TV stand.

Check for the supplied accessories shown below.

**Holder-Screw 1 : 4EA**

**Holder-Screw 2 : 8EA**



**TV-Mount**

**Holder-Fix Mount**

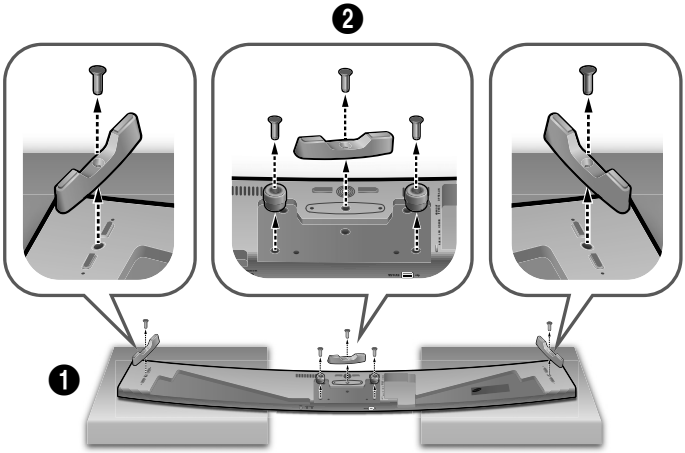


1. Place the Soundbar as shown in the illustration, ensuring that none of the buttons touch the surface it is lying on.
2. If the **Holder-Foot/Holder-Support** is attached, remove it first to install the TV-Mount.

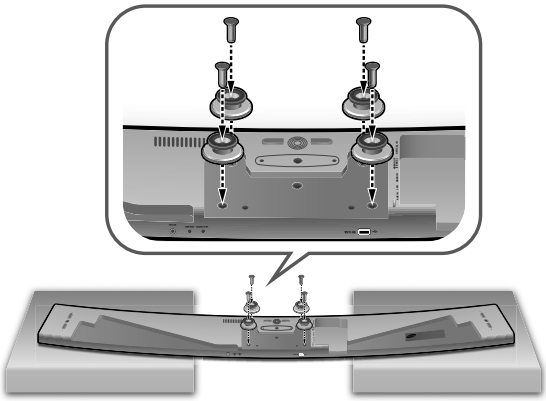

3. Fasten the four **Holder-Screws 1** and four of the **Holder-Screws 2** to the four holes in the Soundbar, as shown in the illustration.

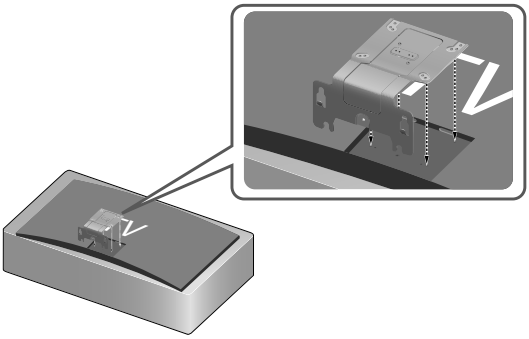

4. If you mount the Soundbar on a matched Samsung TV, use the Guide on TV to put the **TV-Mount** on TV securely.

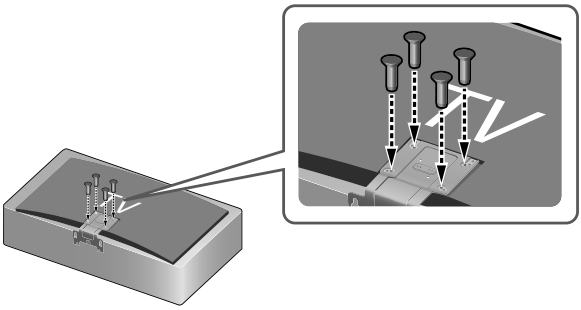

5. Fasten the **TV-Mount** to the TV using the remaining 4 **Holder-Screws 2**.
6. After attaching the **TV-Mount**, mount the TV on the wall.

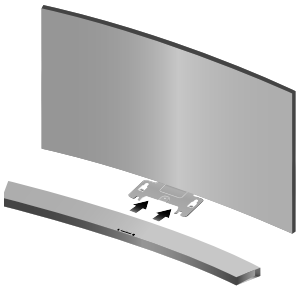

Soundbar base

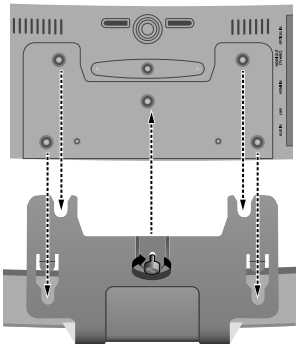

TV base, with **TV-Mount** attached

7. Push the Soundbar onto the **TV-Mount** as far as it will go, as shown in the illustration.
8. Fasten the **Holder-Fix Mount** to the Soundbar to fix the Soundbar to the **TV-Mount**.

## INSTALLING SOUNDBAR TO TV STAND

You can install Soundbar to TV stand if you have Soundbar matching TV with this model.

- If the **Holder-Foot/Holder-Support** is not attached, perform the following steps 1~3. If attached, perform step 4.

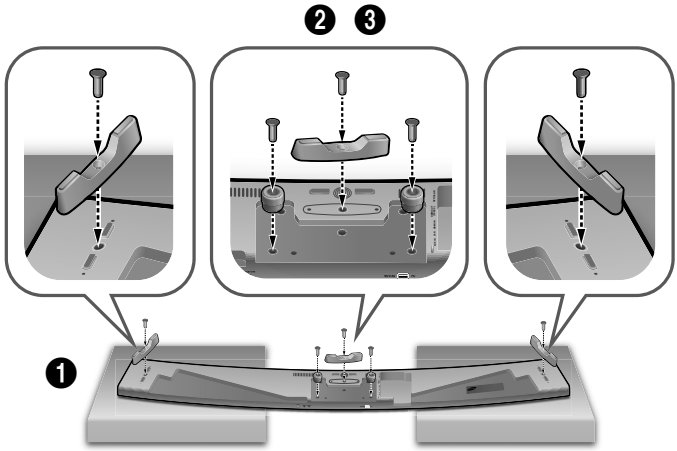


1. Place the Soundbar as shown in the illustration, ensuring that none of the buttons touch the surface it is lying on.
2. Fix **Holder-Foot** (3EA) and **Holder-Screw 2** (3EA) to the Soundbar as shown in the illustration.
3. In the same manner, fix **Holder-Support** (2EA) and **Holder-Screw 2** (2EA) to the Soundbar.

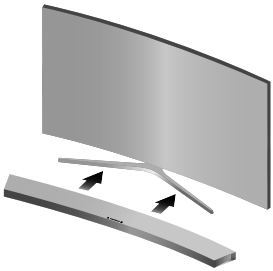

4. Align the Soundbar's centre with the centre of the base of the TV, and then carefully push it onto the stand as far as it will go, as shown in the illustration. Be careful not to unbalance the TV.



- Do not place a heavy thing or step on the main unit.

## INSTALLING SOUNDBAR TO FREE-STANDING

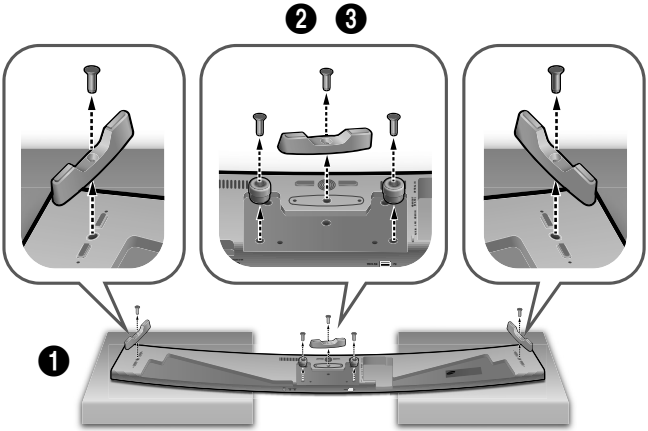


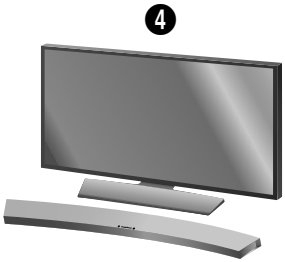


1. If **Holder-Foot/Holder-Support** attached, lay the Soundbar so that the buttons on the Soundbar do not physically contact the floor.
2. Remove **Holder-Foot** (3EA) and **Holder-Screw 2** (3EA) from the Soundbar as shown in the illustration.
3. In the same manner, remove **Holder-Support** (2EA) and **Holder-Screw 2** (2EA) from the Soundbar.
4. Place Soundbar anywhere you want.

# ASSEMBLING THE CLAMP-WIRE

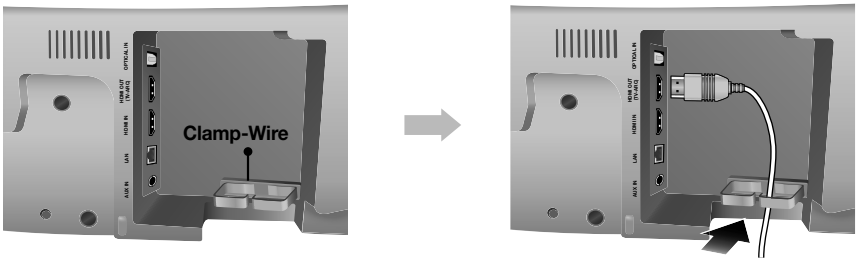


Attach the clamp-wire to the unit as shown, and then run the cables through the clamp-wire to keep them neat.

# MOUNTING THE COVER-FOOT ONTO SUBWOOFER

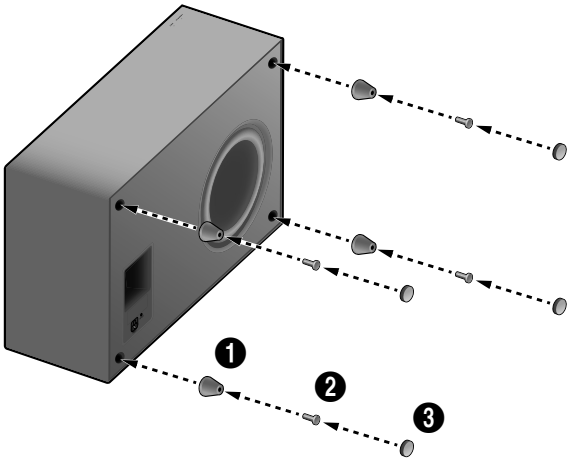


1. Place each **Cover-Foot** on the 4 holes correspondingly as shown in the illustration.
2. Insert **Screw-Taptite** (4EA) into corresponding hole of **Cover-Foot**.
3. Block up the holes with **Foot Rubber** (4EA) to complete.

- Do not connect the power cord of this product or your TV to a wall outlet until all connections between components are complete.
- Before moving or installing this product, be sure to turn off the power and disconnect the power cord.

# CONNECTING THE SUBWOOFER

## CONNECTING TO THE SUBWOOFER AUTOMATICALLY

The main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on.

• If it is completely connected, the blue LED in the subwoofer stops blinking.

## CONNECTING TO THE SUBWOOFER MANUALLY

The Subwoofer's linking ID is preset at the factory and the main unit and subwoofer should link (connect wirelessly) automatically when the main unit and subwoofer are turned on. If the Link indicator does not light when the main unit and subwoofer are turned on, please set the ID by following the procedure below.

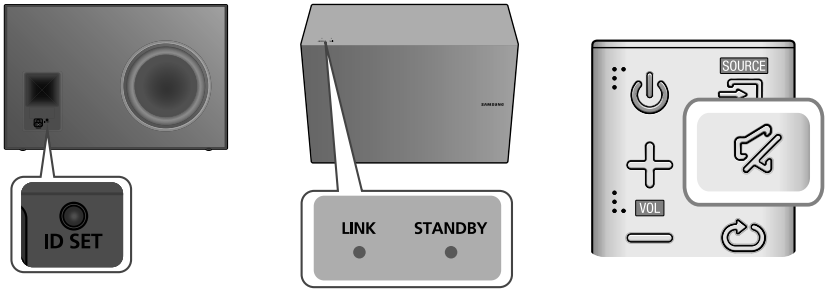


1. Plug the power cords of the main unit and subwoofer into an AC wall outlet.
2. Press the **ID SET** button on the back of the subwoofer with a small, pointed object for 5 seconds.
   - The STANDBY indicator is turned off and the LINK indicator (Blue LED) blinks quickly.
3. While the main unit is powered off (in STANDBY mode), press and hold the (Mute) on the remote control for 5 seconds.
4. The **ID SET** message appears on the Soundbar's display.
5. To finalise the link, turn the main unit's power on while the subwoofer's Blue LED blinks.
   - The main unit and the subwoofer should now be linked (connected).
   - The Link indicator (Blue LED) on the subwoofer should be on.
   - If the Link indicator is not solid blue, the linking process has failed. Turn off the main unit and start again from Step 2.
   - You can enjoy better sound from the wireless subwoofer by selecting a Sound Effect. (See page 10)

- Before moving or installing the product, be sure to turn off the power and disconnect the power cord.
- If the main unit is powered off, the wireless subwoofer will be in standby mode and the STANDBY LED on the upper side will come on after the Link indicator (Blue LED) blinks for 30 seconds.
- If you use a device that uses the same frequency (2.4GHz) as the Soundbar near the Soundbar, interference may cause some sound interruption.
- The transmission distance of the wireless signal between the main unit and subwoofer is about 10 meters, but may vary depending on your operating environment. If a steel-concrete or metallic wall is between the main unit and the wireless subwoofer, the system may not operate at all, because the wireless signal cannot penetrate metal.
- If the main unit doesn't make a wireless connection, follow steps 1-5 on the previous page to re-set the connection between the main unit and wireless subwoofer.

- The wireless receiving antenna is built into the wireless subwoofer. Keep the unit away from water and moisture.
- For optimal listening performance, make sure that the area around the wireless subwoofer location is clear of any obstructions.

# CONNECTING TO A TV

## CONNECTIONS WITH TV USING HDMI (DIGITAL) CABLE

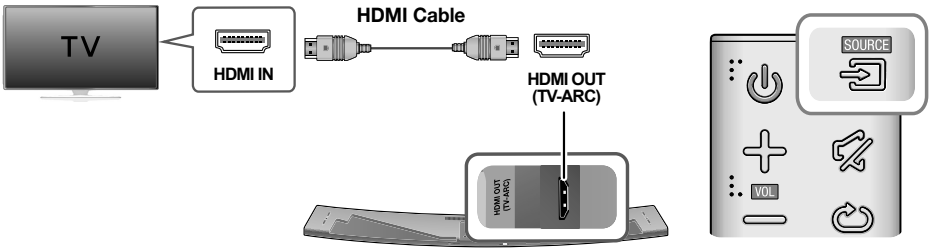


1. Connect an HDMI cable from the **HDMI OUT (TV-ARC)** jack on the back of the product to the HDMI IN jack on your TV.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

- HDMI is an interface that enables the digital transmission of video and audio data with just a single connector.
- If the TV provides an ARC port, connect the HDMI cable to the HDMI IN (ARC) port.
- We recommend you use a coreless HDMI cable if possible. If you use a cored HDMI cable, use one whose diameter is less than 14 mm.
- Anynet+ must be turned on.
- This function is not available if the HDMI cable does not support ARC.

## CONNECTIONS WITH TV USING OPTICAL (DIGITAL) CABLE

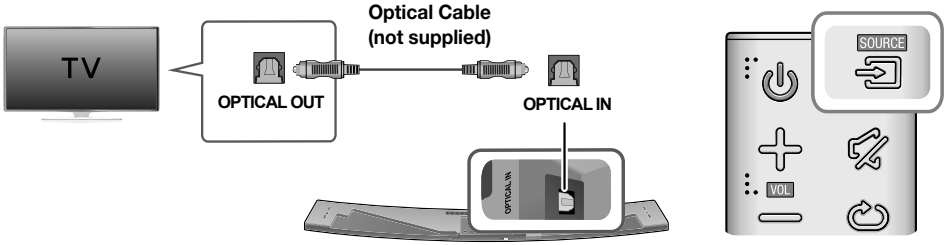


1. Connect **OPTICAL IN** (Audio) on the Soundbar to the OPTICAL OUT jack of the TV.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

### ► Auto Power Link

If you have connected the main unit to a TV with a digital optical cable, set the Auto Power function ON to have the Soundbar turn on automatically when you turn the TV on.

| AUTO POWER LINK | Display |
|---|---|
| ON | **OFF - ANYNET+ / ON - POWER LINK** |
| OFF | **ON - ANYNET+ / OFF - POWER LINK** |

1. Connect the Soundbar and a TV with an Optical cable (not supplied).
2. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **D.IN** mode.
3. Press the **Anynet+** button on the remote control to toggle the Auto Power Link function on and off.

- Depending on the connected device, Auto Power Link may not function.

## TV SOUNDCONNECT

You can enjoy TV sound through your Soundbar when it is connected to a Samsung TV that supports the TV SoundConnect function.

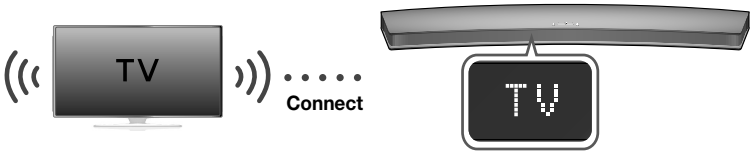


1. Turn on the TV and Soundbar.
   - Turn on the menu of the TV.
   - Move to Speaker Settings on "Sound" tab.
   - Set the "Add New Device" menu to "On".
2. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **TV** mode.
3. On the TV, a message asking whether to enable the TV SoundConnect function appears.
4. Select **<Yes>** to finish connecting the TV and Soundbar using the TV's remote control.

- Switching the Soundbar's mode from TV to another mode automatically terminates TV SoundConnect.
- To connect the Soundbar to another TV, the existing connection must be terminated.
- Terminate the connection to the existing TV, and then press the ▶II button on the remote control for 5 seconds to connect to another TV.

- The TV SoundConnect (SoundShare) function is supported by some Samsung TVs released from 2012 on. Check whether your TV supports the TV SoundConnect (SoundShare) function before you begin. (For further information, refer to the TV's user manual.).
- If your Samsung TV was released before 2014, check the SoundShare setting menu.
- If the distance between the TV and Soundbar exceeds 10 meters, the connection may not be stable or the audio may stutter. If this occurs, relocate the TV or Soundbar so that they are within operational range, and then re-establish the TV SoundConnect connection.
- TV SoundConnect Operational Ranges:
  - Recommended pairing range: within 2 meters.
  - Recommended operational range: within 10 meters.
- The Play/Pause, Next, and Prev buttons on the Soundbar or Soundbar's remote do not control the TV.

# CONNECTIONS WITH EXTERNAL DEVICE

## HDMI CABLE

HDMI is the standard digital interface for connecting to TVs, projectors, DVD players, Blu-ray players, set top boxes, and more.
HDMI prevents any degradation to the signal due to conversion to analogue and maintains the video and audio quality of the original digital source.

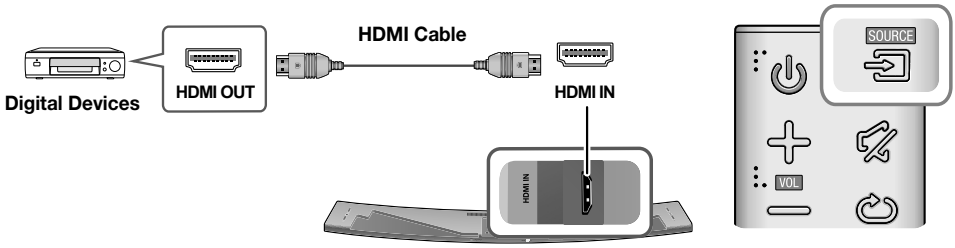


1. Connect an HDMI cable from the **HDMI IN** jack on the back of the product to the HDMI OUT jack on your digital device.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **HDMI** mode.

## OPTICAL OR AUX CABLE

This unit comes equipped with one optical in digital jack and one audio analogue in jack, giving you two ways to connect it to an External Devices.

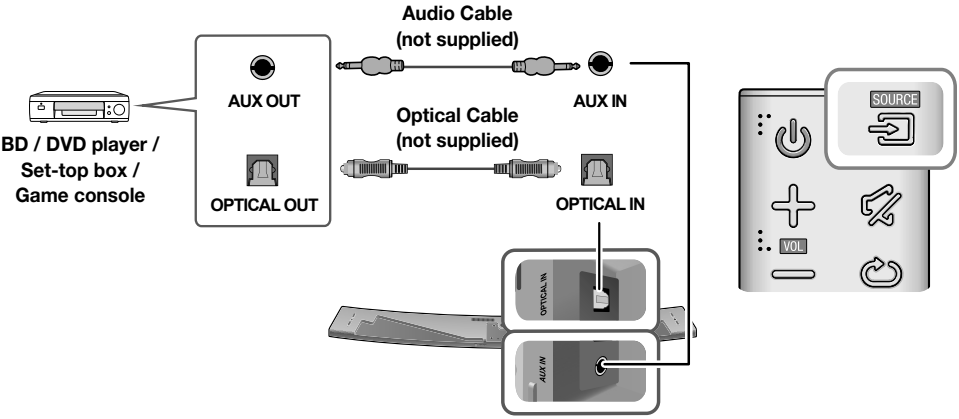

### ► AUX Cable

1. Connect **AUX IN** (Audio) on the main unit to the AUDIO OUT jack of the Source Device.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **AUX** mode.

### ► Optical Cable

1. Connect **OPTICAL IN** (Audio) on the main unit to the OPTICAL OUT jack of the Source Device.
2. Press the (Source) button on the top panel of Soundbar or the **SOURCE** button on remote control to select the **D.IN** mode.

## USB

You can play music files located on USB storage devices through the Soundbar.

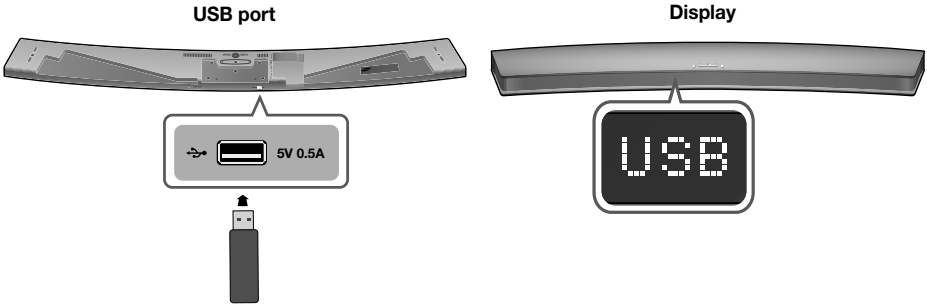


1. Connect the USB device to the USB port on the back of the product.
2. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **USB** mode.
3. **USB** appears on the display screen.
   - The Soundbar connection to the USB device is complete.
   - The Soundbar automatically turns off (Auto Power Off) if no USB device has been connected for more than 15 minutes.

### ► Before you connect a USB device

Be aware of the following:

- If the file name of a file on a USB device exceeds 10 characters, it is not displayed on the Soundbar's display.
- This product may not be compatible with certain types of USB storage media.
- The Soundbar supports the FAT16 and FAT32 file systems.
  - The NTFS file system is not supported.
- Connect USB devices directly to the USB port of the product. Otherwise, you may encounter a USB compatibility problem.
- Do not connect multiple storage devices to the product via a multi-card reader. It may not operate properly.

- Digital camera PTP protocols are not supported.
- Do not remove the USB device while it is transferring files.
- DRM-protected music files (MP3, WMA) from commercial web sites cannot be played.
- External HDDs are not supported.
- Mobile phone devices are not supported.
- File Format Type Compatibility list:

| Extension | Codec | Sampling Rate | Bit rate |
|---|---|---|---|
| ***.mp3** | MPEG 1 Layer1 | 32/44.1/48 | 32 ~ 448kbps |
| | MPEG 1 Layer2 | 32/44.1/48 | 32 ~ 384kbps |
| | MPEG 1 Layer3 | 32/44.1/48 | 32 ~ 320kbps |
| | MPEG 2 Layer3 | 16/22.05/24/32/44.1/48 | 8 ~ 160kbps |
| | MPEG 2.5 Layer3 | 8/11.025/12/16/22.05/24/32/44.1/48 | 8 ~ 160kbps |
| ***.wma** | Wave_Format_MSAudio1 | - | - |
| | Wave_Format_MSAudio2 | - | - |
| | WMA Professional | Not Support | - |
| ***.wav** | - | 8 KHz ~ 192KHz | ~ 8.8Mbps |
| ***.ogg** | - | 8 KHz ~ 48KHz | - |
| ***.flac** | - | 8 KHz ~ 192KHz | ~ 5.6Mbps |
| ***.m4a** | Alac<br>(Apple lossless Audo codec) | 8 KHz ~ 192KHz | ~ 1Mbps |
| ***.aif** | Audio Interchange File Format | 8 KHz ~ 192KHz | ~ 4.4Mbps |

- If there are too many folders and files stored in the USB device, reading may take some time.

# INPUT MODE

Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the mode you want.

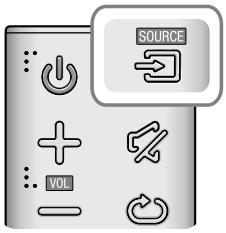


| Input mode | Display |
|---|---|
| Optical Digital input<br>ARC (HDMI OUT) input | **D.IN** |
| AUX input | **AUX** |
| HDMI input | **HDMI** |
| BLUETOOTH mode | **BT** |
| TV SoundConnect | **TV** |
| USB mode | **USB** |

The unit turns off automatically in the following situations.

- D.IN / HDMI / BT / TV / USB / ARC Mode
  - If there is no audio signal for 15 minutes.
- AUX Mode

  To turn the Auto Power Down function ON or OFF, press and hold the ▶II button for 5 seconds.
  **ON - AUTO POWER DOWN** / **OFF - AUTO POWER DOWN** appears on the display.
  - If the AUX cable is disconnected for 15 minutes.
  - If there is no KEY input for 8 hours when the AUX cable is connected.

# BLUETOOTH

You can connect a Bluetooth device to the Soundbar and enjoy music with high quality stereo sound, all without wires!

## TO CONNECT THE SOUNDBAR TO A BLUETOOTH DEVICE

Check if the Bluetooth device supports the Bluetooth compliant stereo headset function.

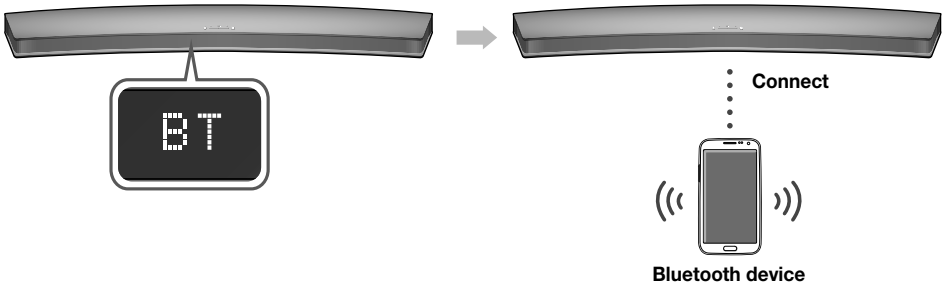


1. Press the (Source) button on the main unit's top panel or the **SOURCE** button on the remote control to select the **BT** mode.
   - You will see **BT READY** on the front display of the Soundbar.
2. Select the Bluetooth menu on the Bluetooth device you want to connect. (Refer to the Bluetooth device's user manual.)
3. Select **"[Samsung] HW-Jxxxx"** from the list.
   - When the Soundbar is connected to the Bluetooth device, it will display [**Bluetooth device name**] → **BT** on the front display.
   - The device name can only be displayed in English. An underline " _ " will be displayed if the name is not in English.
   - If the Bluetooth device has failed to pair with the Soundbar, delete the previous "**[Samsung] HW-Jxxxx**" found by the Bluetooth device and have it search for the Soundbar again.
4. Play music on the connected device.
   - You can listen to the music playing on the connected Bluetooth device over the Soundbar.
   - In **BT** mode, the Play / Pause / Next / Prev functions are not available. However, these functions are available in Bluetooth devices supporting AVRCP.

- If asked for PIN code when connecting a Bluetooth device, enter <0000>.
- Only one Bluetooth device can be paired at a time.
- The Bluetooth connection will be terminated when you turn the Soundbar off.
- The Soundbar may not perform Bluetooth search or connection correctly under the following circumstances:
  - If there is a strong electrical field around the Soundbar.
  - If several Bluetooth devices are simultaneously paired with the Soundbar.
  - If the Bluetooth device is turned off, not in place, or malfunctions.
  - Note that such devices as microwave ovens, wireless LAN adaptors, fluorescent lights, and gas stoves use the same frequency range as the Bluetooth device, which can cause electric interference.

- The Soundbar supports SBC data (44.1kHz, 48kHz).
- Connect only to a Bluetooth device that supports the A2DP (AV) function.
- You cannot connect the Soundbar to a Bluetooth device that supports only the HF (Hands Free) function.
- Once you have paired the Soundbar to a Bluetooth device, selecting "**[Samsung] HW-Jxxxx**" from the device's scanned devices list will automatically change the Soundbar to **BT** mode.
- Available only if the Soundbar is listed among the Bluetooth device's paired devices. (The Bluetooth device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Bluetooth device's searched devices list only when the Soundbar is displaying **BT READY**.
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Bluetooth device.

## TO DISCONNECT THE BLUETOOTH DEVICE FROM THE SOUNDBAR

You can disconnect the Bluetooth device from the Soundbar. For instructions, see the Bluetooth device's user manual.

- The Soundbar will be disconnected.
- When the Soundbar is disconnected from the Bluetooth device, the Soundbar will display **BT DISCONNECTED** on the front display.

## TO DISCONNECT THE SOUNDBAR FROM THE BLUETOOTH DEVICE

Press the **SOURCE** button on the remote control or the (Source) button on the product's top panel to switch from **BT** to another mode or turn off the Soundbar.

- The connected Bluetooth device will wait a certain amount of time for a response from the Soundbar before terminating the connection. (Disconnection time may differ, depending on the Bluetooth device)

- In Bluetooth connection mode, the Bluetooth connection will be lost if the distance between the Soundbar and the Bluetooth device exceeds 10 meters.
- The Soundbar automatically turns off after 15 minutes in the Ready state.

### ► More About Bluetooth

Bluetooth is a technology that enables Bluetooth-compliant devices to interconnect easily with each other using a short wireless connection.

- A Bluetooth device may cause noise or malfunction, depending on usage, when:
  - A part of your body is in contact with the receiving/transmitting system of the Bluetooth device or the Soundbar.
  - It is subject to electrical variation from obstructions caused by a wall, corner, or office partition.
  - It is exposed to electrical interference from same frequency-band devices including medical equipment, microwave ovens, and wireless LANs.
- Pair the Soundbar with the Bluetooth device while they are close together.
- The further the distance between the Soundbar and Bluetooth device, the worse the quality is. If the distance exceeds the Bluetooth operational range, the connection is lost.
- In poor reception areas, the Bluetooth connection may not work properly.
- The Bluetooth connection only works when it is close to the unit. The connection will be automatically cut off if the Bluetooth device is out of range. Even within range, the sound quality may be degraded by obstacles such as walls or doors.

# USING THE NETWORK STANDBY ON FUNCTION

The Network Standby On function becomes available if wireless connection was properly established between the smart device and Soundbar. This function turns on the Soundbar automatically when a smart device attempts to connect to the Soundbar via Bluetooth or Wi-Fi. If the Soundbar was turned on via Bluetooth connection, its input mode is set to **BT** automatically. Turning on the Soundbar via Wi-Fi is available only by using the App. For further information, refer to the Web manual.

1. Connect the Smart device to your Soundbar.
2. Turn the Network Standby On function on by pressing the ⏭ button on the Soundbar remote for more than 5 seconds. You can turn the function off by pressing the ⏭ button again for more than 5 seconds.

- Available only if the Soundbar is listed among the Smart device's paired devices. (The Smart device and the Soundbar must have been previously paired at least once.)
- Soundbar will appear in the Smart device's searched devices list only when the Soundbar is displaying [BT READY] or [WiFi READY].
- In the TV SoundConnect mode, the Soundbar cannot be paired to another Smart device.
- If Network Standby On function did not work
  - The Network Standby On is set to Off.
- Wi-Fi connection to the Soundbar will be terminated if its power cord was disconnected or the power was cut off. Turn on the Soundbar and reconnect.

# USING THE MULTIROOM LINK

Once the Soundbar is connected to a smart device with Multiroom App, you can connect multiple Samsung Multiroom devices together wirelessly.

## BEFORE YOU BEGIN

### ► Communication Basics

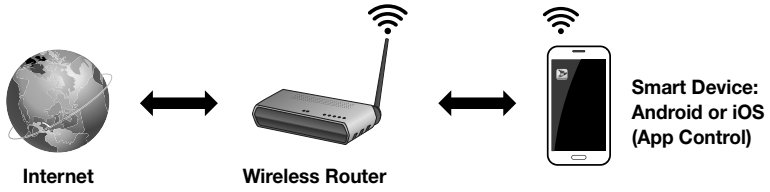


1. Requirements: Wireless Router, Smart Device
2. The wireless router should be connected to the Internet.
3. The smart device should be connected to the router via a Wi-Fi connection.

# INSTALLING THE SAMSUNG MULTIROOM APP

To use the Soundbar, you must download and then install the Samsung Multiroom App by accessing the app through Google play or the App Store. With the Samsung Multiroom App installed, you can play music stored in your smart device, from connected devices and other content providers, and from Internet radio stations.

## ► Android or iOS

Download the Samsung Multiroom app from Google Play or the App Store of your smart device.

* Market search : Samsung Multiroom

**or**

## ► Accessing the Samsung Multiroom App

To access the Samsung Multiroom app, press the Multiroom app icon on your smart device.

# CONNECTING THE SOUNDBAR TO YOUR NETWORK

On your Smart device, select the Samsung Multiroom app.
Follow the directions on your smart device's screen.

- For further information, refer to the Web Manual.
  - Web manual : www.Samsung.com → Support → Product name search → HW-J8501 PDF file download.
- When connected to a wired network, try to use the CAT 7 cable to connect.

# SOFTWARE UPDATE

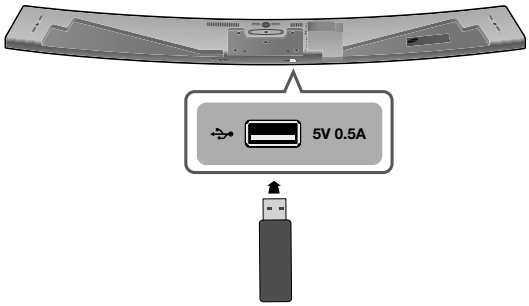


## UPDATING WITH USB

Samsung may offer updates for the Soundbar's system firmware in the future.

If an update is offered, you can update the firmware by connecting a USB device with the firmware update stored on it to the USB port on your Soundbar.

Note that if there are multiple update files, you must load them onto the USB device singly and use them to update the firmware one file at a time.

Please visit samsung.com or contact the Samsung call centre to receive more information about downloading updates files.

1. While the Soundbar is turned off, connect the USB storage device that contains the updating firmware to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it and turn it on.
3. Turn on the Soundbar **UPDATE** appears on the display and updating begins within 3 minutes.
   - Upon completion of updating, the Soundbar turns off and on automatically.

### ► If UPDATE was not displayed

1. Turn off the Soundbar, connect the USB storage device that contains update files to the Soundbar's USB port.
2. Disconnect the power cord, reconnect it and turn it on.

- Insert a USB device containing the firmware update into the USB port on the main unit.
- Updating firmware may not work properly if audio files supported by the Soundbar are stored in the USB storage device.
- Do not disconnect the power or remove the USB device while updates are being applied. The main unit will turn off automatically after completing the firmware update.

- After the update, all settings are reset to their factory default settings. We recommend you write down your settings so that you can easily reset them after the update. Note that updating firmware resets the subwoofer connection too.
  If connection to the subwoofer is not re-established automatically after the update, refer to page 16.
  If the firmware fails to update, we recommend formatting the USB device in FAT16 and trying again.
- Do not format the USB device in the NTFS format. The Soundbar does not support the NTFS file system.
- Depending on the manufacturer, some USB devices may not be supported.

## AUTO UPDATE

Even when the Soundbar is turned off, the Soundbar will automatically check latest software version and continue to update if it was connected to the Internet.

- The Soundbar is configured to run auto update by default.
- To use auto update function, the Soundbar must be connected to the Internet.
- Wi-Fi connection to the Soundbar will be terminated if its power cord was disconnected or the power was cut off. Turn on the Soundbar and reconnect.

# TROUBLESHOOTING



Before requesting service, please check the following.

| **The unit will not turn on.** | |
|---|---|
| • Is the power cord plugged into the outlet? | → Connect the power plug to the outlet. |

| **A function does not work when the button is pressed.** | |
|---|---|
| • Is there static electricity in the air? | → Disconnect the power plug and connect it again. |

| **Sound is not produced.** | |
|---|---|
| • Is the Mute function on? | → Press the (Mute) button to cancel the function. |
| • Is the volume set to minimum? | → Adjust the Volume. |

| **The remote control does not work.** | |
|---|---|
| • Are the batteries drained? | → Replace with new batteries. |
| • Is the distance between the remote control and main unit too far? | → Move closer to the unit. |

| **The TV SoundConnect (TV pairing) failed.** | |
|---|---|
| • Does your TV support TV SoundConnect? | → TV SoundConnect is supported by some Samsung TVs released from 2012 on. Check your TV to see if it supports TV SoundConnect. |
| • Is your TV firmware the latest version? | → Update your TV with the latest firmware. |
| • Does an error occur when connecting? | → Contact the Samsung call centre. |
| • Reset the TV mode and connect again. | → Press and hold the ▶II button for 5 seconds to reset the TV SoundConnect connection. |

| **The red LED on the subwoofer blinks and the subwoofer is not producing sound.** | |
|---|---|
| • Your subwoofer may not be connected to the main body of the product. | → Try to connect your subwoofer again. (See Page 16) |

| **The subwoofer drones and vibrates noticeably.** | |
|---|---|
| • Try to adjust the vibration of your subwoofer. | → Press the **WOOFER** button on your remote control to adjust its value (between -12, -6 to +6). |

# SPECIFICATIONS

| Model name | HW-J8501 |
|---|---|

| | | | |
|---|---|---|---|
| GENERAL | USB | | 5V / 0.5A |
| | Weight | Main Unit | 5 kg |
| | | Subwoofer (PS-WJ8501) | 10.6 kg |
| | Dimensions (W x H x D) | Main Unit | 1450 x 60 x 185 mm |
| | | Subwoofer (PS-WJ8501) | 500 x 332 x 181 mm |
| | Operating Temperature Range | | +5°C to +35°C |
| | Operating Humidity Range | | 10 % to 75 % |
| AMPLIFIER | Rated Output Power | Main Unit | 21W/CH x 9, 8ohm, THD=10%, 1KHz |
| | | Subwoofer (PS-WJ8501) | 161W, 3ohm, THD=10%, 100Hz |
| | S/N Ratio (Analogue Input) | | 65 dB |
| | Separation (1kHz) | | 65 dB |

* S/N ratio, distortion, separation, and usable sensitivity are based on measurements using AES (Audio Engineering Society) guidelines.

* Nominal specification

- Samsung Electronics Co., Ltd reserves the right to change the specifications without notice.
- Weight and dimensions are approximate.
- For the power supply and Power Consumption, refer to the label attached to the product.

※ **Open Source Licence Notice**

- To send inquiries and requests regarding open sources, contact Samsung via Email (oss.request@samsung.com).

SAMSUNG

# HW-J8501

دليل المستخدم

# Curved Soundbar

## تخيل الإمكانيات

نشكرك على شراء هذا المنتج من منتجات سامسونج.
للحصول على مجموعة الخدمات الكاملة، يرجى تسجيل المنتج الخاص بك على
www.samsung.com/register

AH68-02819U-01

AH68-02819U-01

# الميزات

### صوت محيطي شامل من 9.1Ch

تتطلب أجهزة التلفزيون الكبيرة صوتًا ضخمًا. يمنح جهاز Curved Soundbar للتلفزيون ذي التصميم المنحني تجربة صوت أكثر قوة مع صوت محيطي بطاقة 350 وات للصوت المحيطي 9.1Ch الرائع. تعمل السماعات الموجودة على الجانبين على توسيع منطقة الاستماع المثلى، مما يعمل على تحسين تأثير الصوت المحيط لتوفير تجربة استماع بطبقات أكثر وشاملة.

### خدمات تدفق الموسيقى

يقوم جهاز Curved Soundbar بالاستعراض داخل الموسيقى المفضلة بشكل أسهل عن ذي قبل، بفضل إمكانات Wi-Fi به. فهو يقوم بالوصول إلى تطبيق Samsung Multiroom لتجربة أفضل خدمات تدفق الموسيقى عبر اشتراك الإنترنت.

### الوظيفة TV SoundConnect

قم بتوصيل التلفزيون وجهاز Soundbar بسهولة من خلال تقنية بلوتوث باستخدام وظيفة TV SoundConnect. فعدم وجود متدلية بين جهاز Soundbar والتلفزيون يسمح لك بعرض التصميم الصغير الرفيع والأملس لكلا النظامين، مع الحفاظ على المظهر النظيف لبيئة المعيشة. وتحكم في جهاز Soundbar والتلفزيون من وحدة تحكم عن بُعد واحدة للتلفزيون.

### مشاركة مصدر الموسيقى (تشغيل Multiroom)

يسهل التحكم في مصدر موسيقى واحد عبر أجهزة صوت متعددة في أماكن مختلفة باستخدام ارتباط Multiroom. يتحكم تطبيق المحمول عن بُعد في مستوى الصوت والموسيقى على النظام عبر الأجهزة المختلفة، بما في ذلك التلفزيون وجهاز Soundbar ونظام الترفيه المنزلي ومشغل أقراص Blu-ray. يمكنك الاستمتاع بالصوت الذي تريده، أينما تريد.

### HDMI

ينقل منفذ HDMI إشارات الصوت والصورة في نفس الوقت، ويوفر صورة أكثر وضوحًا.
كما أن الوحدة مجهزة بوظيفة ARC والتي تتيح لك إمكانية الاستماع إلى الصوت من التلفزيون من خلال Soundbar عبر كبل HDMI. وتتوافر تلك الوظيفة فقط في حالة قيامك بتوصيل الوحدة بجهاز تلفزيون متوافق مع وظيفة ARC.

### دعم (USB Host)

يمكنك توصيل وتشغيل ملفات الموسيقى من وحدات تخزين (USB) الخارجية مثل مشغلات (MP3)، ووحدات الذاكرة الوميضة (USB flash memory)، إلخ. باستخدام وظيفة (Soundbar's USB HOST).

### وظيفة البلوتوث

يمكنك توصيل جهاز بلوتوث بجهاز Soundbar والاستمتاع بسماع الموسيقى بصوت استريو عالي الجودة، بدون توصيلات سلكية!

## التراخيص

مصنعة بترخيص من معامل Dolby Laboratories.
Dolby ورمز double-D هي علامات تجارية مسجلة لمعامل Dolby Laboratories.

لبراءات اختراع (DTS) راجع الرابط http://patents.dts.com. صُنعت بترخيص من شركة DTS Licensing Limited. DTS، الرمز، و DTS والرمز معًا هي علامات تجارية مسجلة و DTS 2.0 Channel هي علامة تجارية خاصة بشركة DTS. المنتج يتضمن برامج التشغيل.

عبارات (HDMI) و (HDMI High-Definition Multimedia)، وشعار (HDMI) هي علامات تجارية أو علامات تجارية مسجلة لشركة (HDMI Licensing LLC) في الولايات المتحدة والدول الأخرى.

ARA

# معلومات السلامة

## تحذيرات السلامة

لتقليل مخاطر التعرض لصدمة كهربية، لا تقم بإزالة الغطاء (أو الغطاء الخلفي).
فلا توجد أجزاء يمكن للمستخدم صيانتها بالداخل. وإنما يُرجى ترك عملية الصيانة لموظفي الصيانة المؤهلين.

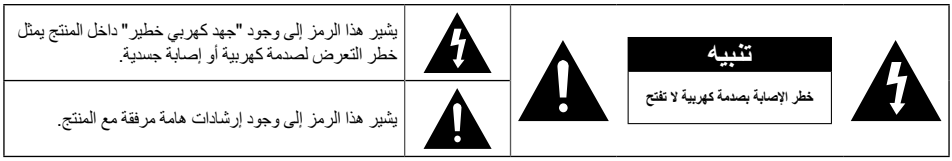
تنبيه
خطر الإصابة بصدمة كهربية لا تفتح
يشير هذا الرمز إلى وجود "جهد كهربي خطير" داخل المنتج يمثل خطر التعرض لصدمة كهربية أو إصابة جسدية.
يشير هذا الرمز إلى وجود إرشادات هامة مرفقة مع المنتج.

**تحذير** : للحد من خطر نشوب الحريق أو التعرض لصدمة كهربية، لا تعرض هذا الجهاز للأمطار أو الرطوبة.

**تنبيه** : للحيلولة دون وقوع الصدمات الكهربية، قم بمطابقة الشفرة العريضة للقابس مع الفتحة العريضة ثم أحكم إدخالها.

- ينبغي أن يكون هذا الجهاز متصلاً دومًا بمأخذ التيار المتردد مع وجود وصلة أرضٍ واقية.
- لفصل الجهاز عن التيار الكهربي الرئيسي، يجب سحب القابس من مقبس التيار الكهربي الرئيسي ولذا ينبغي أن يكون قابس التيار الكهربي الرئيسي جاهزًا للتشغيل.

**تنبيه**

- لا تُعرض هذا الجهاز لقطرات السوائل أو تناثرها. لا تضع أشياء مليئة بالسوائل، كأنية الزهور على الجهاز.
- لإيقاف تشغيل هذا الجهاز تمامًا، يجب سحب قابس التيار الكهربي من المقبس الجداري. ولهذا، يجب أن يكون الوصول إلى قابس التيار الكهربي سهلاً ومتاحًا دائمًا.

## الاحتياطات

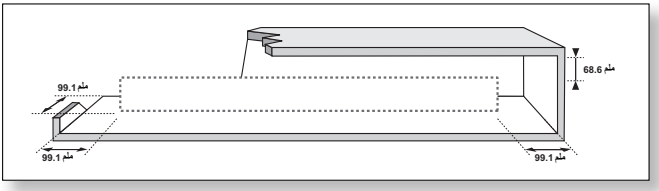


تأكد من توافق مصدر التيار المتردد الموجود في منزلك مع متطلبات الطاقة الموضحة على ملصق التعريف الموجود على ظهر المنتج. قم بتركيب المنتج بشكل أفقي، على سطح مناسب (أثاث)، مع ترك مساحة كافية حوله لتوفير التهوية ٧ إلى ١٠ سم. تأكد من عدم تغطية فتحات التهوية. لا تضع الوحدة على المكبرات أو غيرها من الأجهزة التي ربما ترتفع درجة حرارتها تم تصميم هذه الوحدة للاستخدام بشكل مستمر. لإيقاف تشغيل الوحدة بشكل كامل، افصل قابس التيار المتردد من منفذ التيار الكهربي الموجود بالحائط. افصل التيار الكهربي عن الوحدة في حالة الرغبة في عدم استخدامها لفترة طويلة.

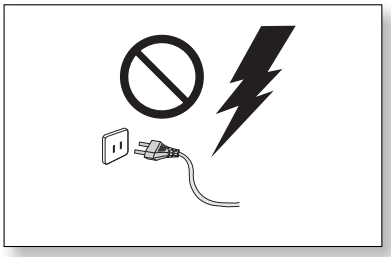

عند هبوب العواصف الرعدية، افصل قابس التيار المتردد من منفذ الكهرباء الموجود بالحائط. من الممكن أن يؤدي ارتفاع الجهد الكهربي إلى إتلاف الوحدة.

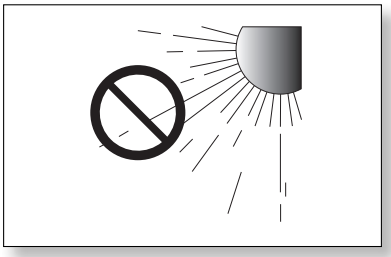

لا تعرض الوحدة إلى ضوء الشمس المباشر أو غير ذلك من مصادر الحرارة. من الممكن أن يؤدي ذلك إلى زيادة درجة الحرارة بشكل كبير مما قد يتسبب في تعطل الوحدة.

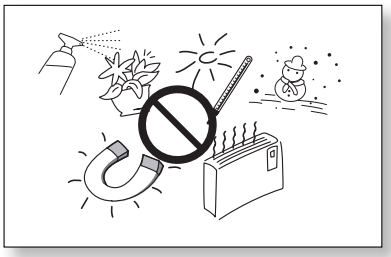

وفر الحماية للمنتج من الرطوبة (آنية الزهور)، والحرارة الزائدة (المدفأة) أو المعدات التي تصدر مجالات مغناطيسية أو كهربية قوية. افصل كبل التيار الكهربي من مصدر التيار المتردد في حالة تعطل الجهاز.
المنتج الخاص بك غير مصمم للاستخدام الصناعي. يتم استخدام هذا المنتج للأغراض الشخصية فقط. من الممكن أن يحدث تكاثف في حالة تخزين المنتج في درجات حرارة منخفضة. في حالة نقل الوحدة خلال فصل الشتاء، انتظر لمدة ساعتين تقريبًا حتى تصل درجة حرارة الوحدة إلى درجة حرارة الغرفة قبل الاستخدام.

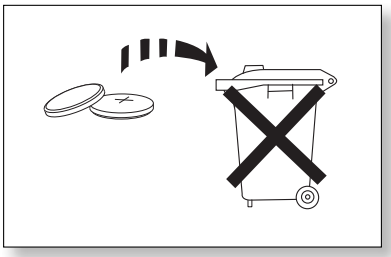

تحتوي البطاريات المستخدمة مع هذا المنتج على مواد كيميائية مضرة بالبيئة. لا تتخلص من البطاريات بإلقائها في سلة المهملات المنزلية العادية.
يحظر التخلص من البطاريات عن طريق حرقها.
لا تعرض البطاريات لدوائر قصر أو الفك أو الحرارة الزائدة.
هناك احتمال بحدوث انفجار إذا تم استبدال البطارية بطريقة غير صحيحة.
قم باستبدالها ببطاريات من نفس النوع أو من نوع مماثل.

تحذير، لا تستهلك البطارية كاملة، فقد يتسبب ذلك في تعرضها لخطر احتراق كيميائي،
[مرفق مع المنتج وحدة تحكم عن بُعد] يحتوي هذا المنتج على بطارية خلوية بأزرار/أجسام معدنية.
إذا تم ابتلاع البطارية الخلوية المزودة بأزرار/أجسام معدنية، فقد يترتب على ذلك تعرضها لاحتراق داخلي شديد في غضون ساعتين فقط مما قد يؤدي إلى تلفها تمامًا. اجعل البطاريات الجديدة والمستخدمة بعيدًا عن متناول الأطفال. إذا لم يتم إحكام غلق المنتج، فتوقف عن استخدامه واحفظه بعيدًا عن متناول الأطفال. إذا كنت تعتقد بأن البطارية قد يتم ابتلاعها أو وضعها داخل أي جزء من جسم، فالتمس فورًا العناية الطبية.

ARA

# المحتويات


**٢ بدء التشغيل**

٢ **الميزات**

٣ **معلومات السلامة**

٦ **المكونات المرفقة**

**٧ الوصف**

٧ **اللوحة العلوية / الأمامية**

٨ **اللوحة الخلفية / السفلية**

٩ **وحدة التحكم عن بُعد**

**١١ التركيب**

١١ **تثبيت Soundbar**

١١ تثبيت كل من Soundbar والتلفزيون بنوع كتيفة التثبيت

١٣ تثبيت Soundbar بحامل التلفزيون

١٤ تثبيت Soundbar بحامل حر

١٥ **تركيب سلك التثبيت**

١٥ **تركيب رجل الغطاء على مضخم الصوت**

**١٦ التوصيلات**

١٦ **توصيل مضخم الصوت**

١٨ **التوصيل بالتليفزيون**

١٨ الاتصال بالتلفزيون باستخدام كبل HDMI (رقمي)

١٨ الاتصال بالتلفزيون باستخدام كبل بصري (رقمي)

١٩ TV SoundConnect

٢١ **التوصيلات بجهاز خارجي**

٢١ كابل HDMI

٢١ كابل بصري أو AUX

٢٢ USB

**٢٤ الوظائف**

٢٤ **وضع الإدخال**

٢٥ **Bluetooth**

٢٧ **استخدام وظيفة Network Standby On**

٢٧ **استخدام Multiroom Link**

٢٩ **تحديث برامج التشغيل**

**٣١ استكشاف الأعطال وإصلاحها**

٣١ **استكشاف الأعطال وإصلاحها**

**٣٢ الملحق**

٣٢ **المواصفات**


تم توفير الأشكال والرسومات التوضيحية في دليل المستخدم هذا كمرجع فقط وقد تختلف هذه الرسومات عن مظهر المنتج الفعلي.

# المكونات المرفقة

## قبل قراءة دليل المستخدم

لاحظ المصطلحات التالية قبل قراءة دليل المستخدم.

### ◄ الرموز المستخدمة في هذا الدليل

| الرمز | المصطلح | التعريف |
|---|---|---|
| | **تنبيه** | يشير إلى أن الوظيفة لا تعمل أو احتمال إلغاء الإعدادات. |
| | **ملاحظة** | تشير إلى التعليمات أو التلميحات على الصفحة التي تساعدك على تشغيل الوظيفة. |

راجع الملحقات المرفقة الموضحة أدناه.

**الوحدة الأساسية**

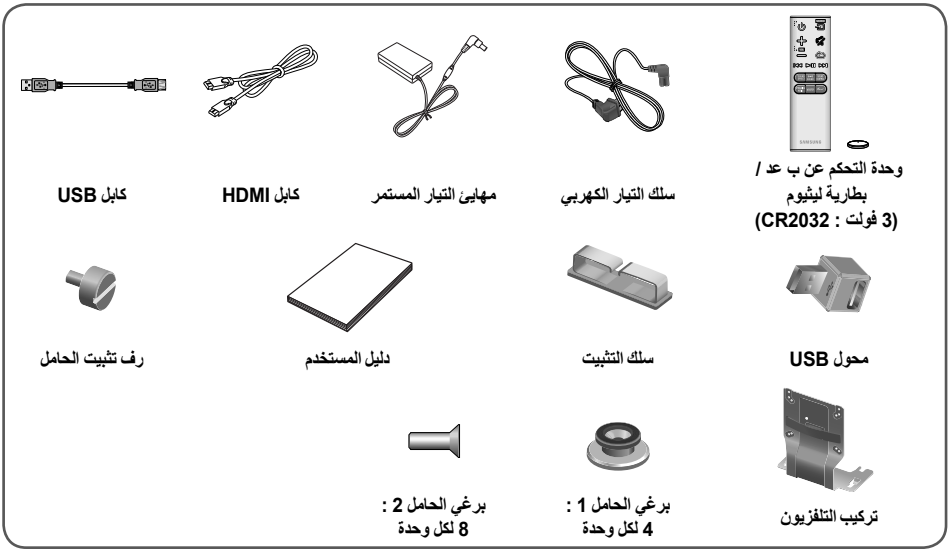


**مضخم الصوت**

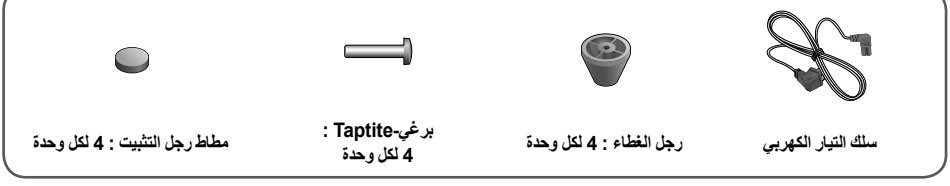


- ربما يختلف شكل الملحقات قليلاً عن الصور الموضحة أعلاه.
- استخدم كابل USB المخصص لتوصيل أجهزة USB الخارجية بالوحدة.

ARA

# اللوحة العلوية / الأمامية

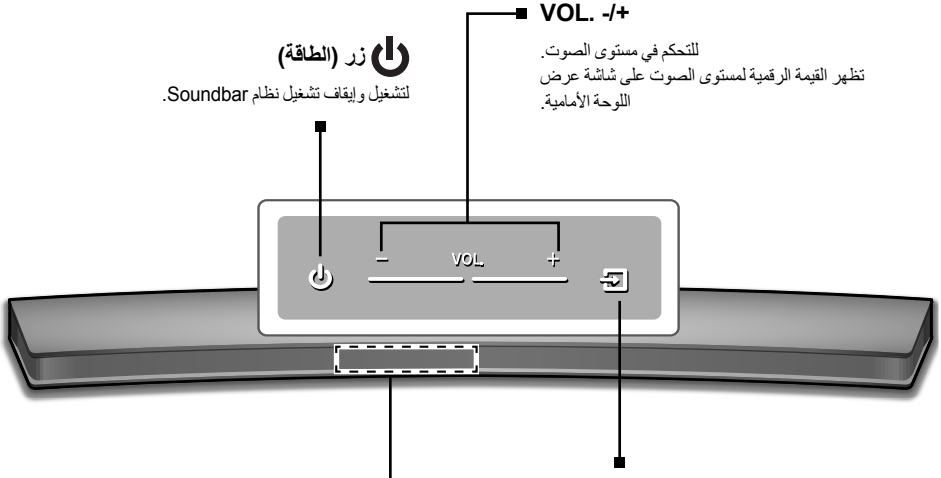
VOL. -/+
للتحكم في مستوى الصوت.
تظهر القيمة الرقمية لمستوى الصوت على شاشة عرض اللوحة الأمامية.
زر (الطاقة)
لتشغيل وإيقاف تشغيل نظام Soundbar.
VOL.
الشاشة
تعرض الوضع الحالي.
زر (المصدر)
للاختيار من بين D.IN، AUX، HDMI، BT، TV، مدخلات USB.
• عند تشغيل الوحدة، يؤدي الضغط على الزر (المصدر) لأكثر من 3 ثوانٍ إلى ضبطه ليعمل بمثابة الزر (كتم الصوت). لإلغاء إعداد الزر (كتم الصوت)، اضغط على الزر (المصدر) لأكثر من 3 ثوانٍ مرة أخرى.

- لتنظيف هذا الجهاز، افصل سلك التيار الكهربي عن منفذ التيار الكهربي بالحائط وامسح المنتج باستخدام قطعة قماش ناعمة وجافة.
قد يحدث قد يحدث تفريغ ستاتيكي لأن الألومنيوم يعد مادة إلكتروستاتيكية موجبة.

- عندما تقوم بتوصيل سلك التيار المتردد، سيعمل مفتاح التشغيل في غضون ٤ إلى ٦ ثوانٍ.
- عندما تقوم بتشغيل هذه الوحدة، سيكون هناك فترة تأخير لمدة ٤ إلى ٥ ثوان قبل صدور الصوت.
- إذا كنت ترغب في الاستمتاع بالصوت فقط من Soundbar، فيجب عليك إيقاف تشغيل مكبرات صوت التلفزيون في قائمة Audio Setup (إعداد الصوت) الخاصة بالتلفزيون. ارجع إلى دليل المالك المرفق مع التلفزيون الخاص بك.

# اللوحة الخلفية / السفلية

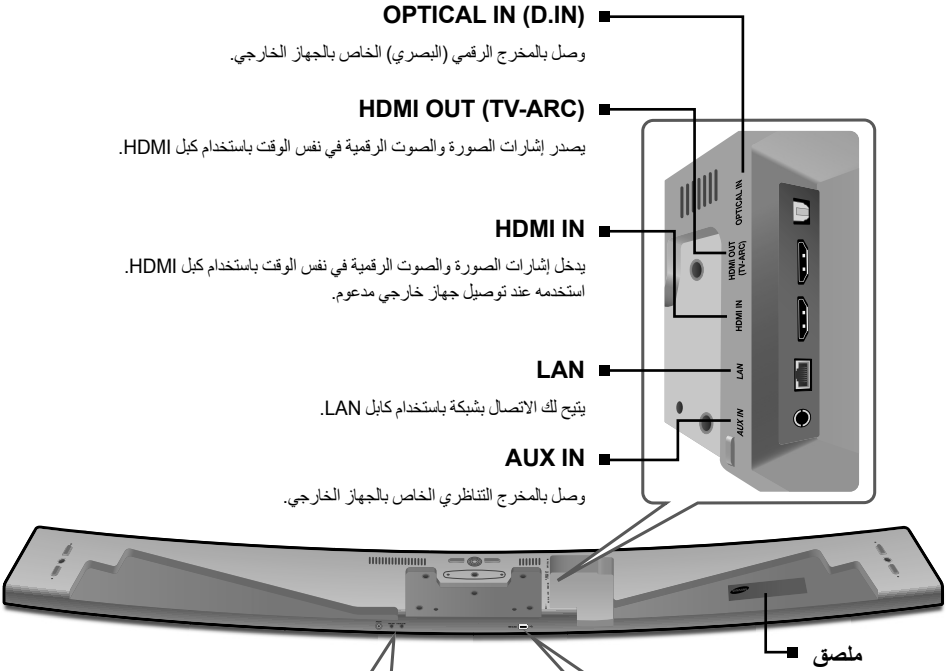
OPTICAL IN (D.IN)
وصل بالمخرج الرقمي (البصري) الخاص بالجهاز الخارجي.
HDMI OUT (TV-ARC)
يصدر إشارات الصورة والصوت الرقمية في نفس الوقت باستخدام كبل HDMI.
HDMI IN
يدخل إشارات الصورة والصوت الرقمية في نفس الوقت باستخدام كبل HDMI.
استخدمه عند توصيل جهاز خارجي مدعوم.
LAN
يتيح لك الاتصال بشبكة باستخدام كابل LAN.
AUX IN
وصل بالمخرج التناظري الخاص بالجهاز الخارجي.
OPTICAL IN
HDMI OUT (TV-ARC)
HDMI IN
LAN
AUX IN
ملصق
Wi-Fi SETUP
SPK ADD
DC 24V
5V 0.5A
Wi-Fi SETUP
اضغط على هذا الزر لتوصيل جهاز Soundbar بالشبكة باستخدام إعداد Wi-Fi.
SPK ADD
اضغط على هذا الزر لتوصيل Soundbar بالموزع. (غير مرفقة)
DC 24V (دخل إمداد الطاقة)
وصل محول التيار المتردد بمقبس مصدر الطاقة، ثم وصل قابس محول التيار المتردد بمنفذ الطاقة الموجود بالحائط.
(منفذ USB)
قم بتوصيل أجهزة USB مثل مشغلات MP3 هنا لتشغيل الملفات على الأجهزة.

- عند فصل كبل التيار الكهربي من محول التيار الكهربي من منفذ التيار الكهربي الموجود بالحائط، أمسك الكبل من المقبس. تجنب سحب الكبل.
- لا تقم بتوصيل هذه الوحدة أو غيرها من المكونات بمخرج التيار المتردد حتى تنتهي من توصيل كافة التوصيلات بين المكونات.

ARA

# وحدة التحكم عن بُعد

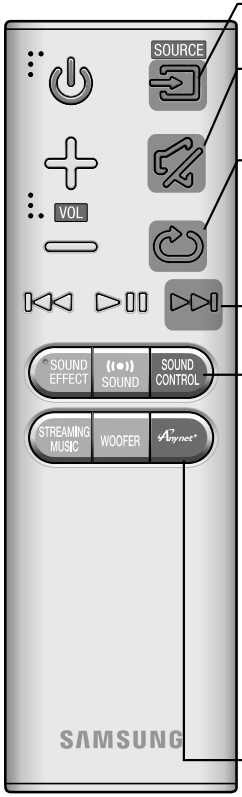


**SOURCE**

اضغط عليه لتحديد مصدر متصل بجهاز Soundbar.

**كتم الصوت**

يمكنك تخفيض الصوت إلى مستوى عن طريق الضغط على الزر.
اضغط مرة أخرى لاستعادة الصوت بالمستوى السابق.

**تكرار**

يمكنك ضبط وظيفة تكرار أثناء إعادة تشغيل الموسيقى من محرك USB.

**OFF - REPEAT** : لإلغاء تشغيل وظيفة الإعادة.

**TRACK - REPEAT** : تشغيل مسار بشكل متكرر.

**ALL - REPEAT** : تشغيل كافة المسارات بشكل متكرر.

**RANDOM - REPEAT** : تشغيل الملفات بترتيب عشوائي.
(المسار الذي تم تشغيله بالفعل ربما يتم تشغيله مرة أخرى.)

**التخطي للأمام**

في حالة وجود أكثر من ملف على الجهاز تقوم بتشغيله، وقيامك بالضغط على زر ⏭، يتم تحديد الملف التالي.

**SOUND CONTROL** (* استخدم الزرين ⏮،⏭ لضبط مستوى الصوت.)

اضغط لتحديد **TREBLE** أو **BASS** أو **AUDIO SYNC**. ثم استخدم الزرين ⏮،⏭ لضبط مستوى الصوت الثلاثي أو مستوى الجهير من 3- إلى 3+.

اضغط مع الاستمرار على الزر **SOUND CONTROL** (التحكم في الصوت) لمدة 5 ثوان تقريبًا لضبط صوت كل نطاق ترددي. يمكن اختيار النطاقات الترددية 150 هرتز و300 هرتز و600 هرتز و1.2 كيلو هرتز و2.5 كيلو هرتز و5 كيلو هرتز و10 كيلو هرتز كما يمكن ضبطها على قيمة تتراوح من 6- إلى 6+.

إذا كان جهاز Soundbar متصلاً بتلفزيون رقمي وبدا الفيديو غير متزامن مع الصوت، فاضغط على زري **SOUND CONTROL** لمزامنة الصوت مع الفيديو. استخدم الأزرار ⏮،⏭ لضبط وقت تأخر الصوت بين٠ ميلي ثانية و٣٠٠ ميلي ثانية. في وضع USB، وضع TV و وضع BT، ربما لا تعمل وظيفة Audio Sync (مزامنة الصوت).

**Anynet+**

اضغط على الزر **Anynet+** لتشغيل وظيفة Anynet+ أو إيقافها.
(بشكلٍ افتراضي: إيقاف تشغيل Auto Power Link OFF، **ON - ANYNET+ /**
**OFF - POWER LINK** أو **ON - POWER LINK / OFF - ANYNET+**).
حيث تتيح لك وظيفة Anynet+ التحكم في Soundbar باستخدام وحدة التحكم عن بعد من تلفزيون سامسونج المتوافق مع Anynet+. يجب توصيل Soundbar بالتلفزيون عن طريق كبل.
* وظيفة Auto Power Link
لمزامنة Soundbar مع المصدر البصري المتصل عبر المقبس البصري حتى يتم تشغيله بشكل تلقائي عند تشغيلك لجهاز التلفزيون. (راجع صفحة ١٩)

يمكنك أيضًا تنشيط وظيفة **Wi-Fi SETUP** بالضغط مع الاستمرار على الزر **Anynet+** الموجود بوحدة التحكم عن بُعد لأكثر من 7 ثوانٍ.

- اسم Soundbar هو ملك خاص لشركة Samsung.
- شغل التلفزيون باستخدام وحدة التحكم عن بعد الخاصة بالتلفزيون.

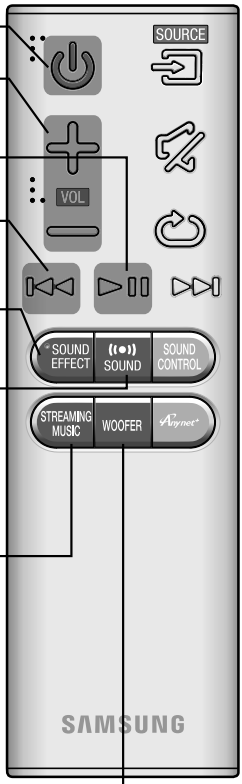


**الطاقة**

لتشغيل وإيقاف تشغيل نظام Soundbar.

**مستوى الصوت**

لضبط مستوى صوت الوحدة.

**التشغيل/الإيقاف المؤقت**

اضغط على زر ▶II لإيقاف تشغيل الملف مؤقتًا.
اضغط على زر ▶II مرة أخرى لتشغيل الملفات المحددة.

**التخطي للخلف**

في حالة وجود أكثر من ملف على الجهاز تقوم بتشغيله، وقيامك بالضغط على زر I◀◀، يتم تحديد الملف السابق.

**SOUND EFFECT**

يمكنك اختيار أوضاع الصوت - **STANDARD (قياسي)** و**MUSIC** و**CLEAR VOICE** و **SPORTS** و**MOVIE** و**NIGHT MODE** - وفقًا للمحتوى الذي تريد الاستماع إليه.
اختر وضع **STANDARD** إذا كنت ترغب في الاستمتاع بالصوت الأصلي.

**SOUND ((●))**

تضيف ميزة الصوت المحيطي العمق والوضوح للصوت. فبالضغط على الزر **SOUND ((●))** بشكل متكرر ينتقل خلال إعدادات الصوت المحيطي بين:
**OFF - SURROUND SOUND، ON - SURROUND SOUND.**

**STREAMING MUSIC**

اضغط على الزر **STREAMING MUSIC** للاستماع إلى محطة راديو الإنترنت. في كل مرة تقوم فيها بالضغط على هذا الزر، ينتقل Soundbar إلى المحطة الافتراضية التالية، من خلال التبديل بين الثلاث محطات الافتراضية.
لاستخدام الوظيفة **STREAMING MUSIC**، يجب أن يكون soundbar متصلاً بالشبكة.
(راجع صفحة ٢٧)

**DRC (Dynamic Range Control) ***

يسمح لك بتطبيق التحكم في النطاق الديناميكي إلى صوت Dolby Digital وDolby Digital Plus و Dolby TrueHD.
اضغط مع الاستمرار على الزر **STREAMING MUSIC**، ثم تعمل وظيفة DRC (Dynamic Range Control) على التبديل بين **ON** و**OFF**.

**WOOFER** (* استخدم الزرين I◀◀، ▶▶I لضبط مستوى مضخم الصوت.)

اضغط على الزر **WOOFER**. ثم استخدم الزرين I◀◀، ▶▶I لضبط مستوى مضخم الصوت من 12-، 6- إلى 6+.
يمكنك أيضًا تنشيط وظيفة **SPK ADD** الخاصة بجهاز soundbar بالضغط مع الاستمرار على الزر **WOOFER** الموجود بوحدة التحكم عن بعد لأكثر من 5 ثوانٍ.

## تركيب البطاريات في وحدة التحكم عن بعد

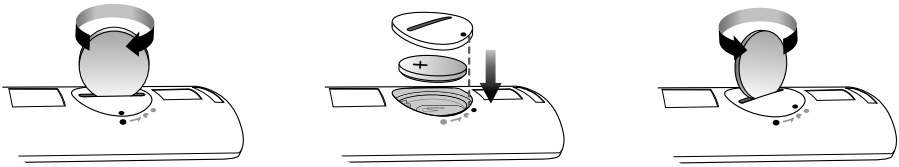

١. استخدم عملة معدنية مناسبة لإدارة غطاء بطارية وحدة التحكم عن بعد في عكس اتجاه حركة عقارب الساعة لإزالته على النحو الموضح في الشكل أعلاه.

٢. ركّب بطارية ليثيوم بجهد ٣ فولت. اجعل القطب الموجب (+) متجهًا لأعلى عند تركيب البطارية. عد تركيب غطاء البطارية مع محاذاة علامات '●' على النحو الموضح في الشكل أعلاه.

٣. استخدم عملة معدنية مناسبة لإدارة غطاء بطارية وحدة التحكم عن بُعد في اتجاه حركة عقارب الساعة حتى يثبت في مكانه.

ARA

# تثبيت SOUNDBAR

## تثبيت كل من SOUNDBAR والتلفزيون بنوع كتيفة التثبيت

- يتوافق هذا الطراز مع تلفزيونSamsung ذي التصميم المنحني S9500/S9000 – 78/65 بوصة. يرجى الرجوع إلى الصفحة الرئيسية لشركة Samsung Electronics للاطلاع على قائمة تفصيلية بالطرز المتوافقة.
- لتركيب كلاً من Soundbar والتلفزيون باستخدام كتيفة التثبيت بالحائط، تأكد من تركيب Soundbar بالتلفزيون أولاً، ثم قم بتركيب التلفزيون.
- لتركيب التلفزيون بالحائط، يرجى الرجوع إلى دليل المستخدم المرفق مع التلفزيون الذي قمت بشرائه.
- لقد تم شحن هذا الطراز مع إرفاق ر**ساق الحامل ودعامة الحامل** بـ Soundbar.
- لا يمكن تركيب جهاز Soundbar هذا على تلفزيون غير متوافق، بأي شكل من أشكال رف تثبيت التلفزيون أو حامل التلفزيون.

راجع الملحقات المرفقة الموضحة أدناه.

| برغي الحامل 1 : 4 لكل وحدة | برغي الحامل 2 : 8 لكل وحدة | تركيب التلفزيون | رف تثبيت الحامل |
|---|---|---|---|

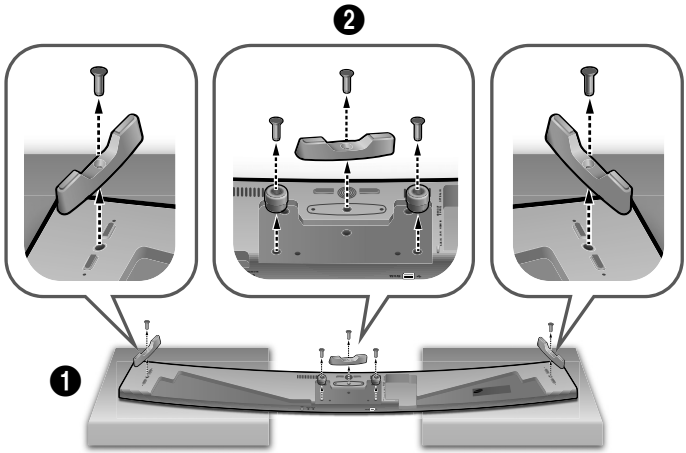


١. ضع جهاز Soundbar كما هو موضح بالرسم بحيث لا تلامس الأزرار السطح الموضوع عليه الجهاز.

٢. إذا تم إرفاق ر**ساق الحامل/دعامة الحامل**، قم بإزالتهما أولاً لتركيب رف تثبيت التلفزيون.

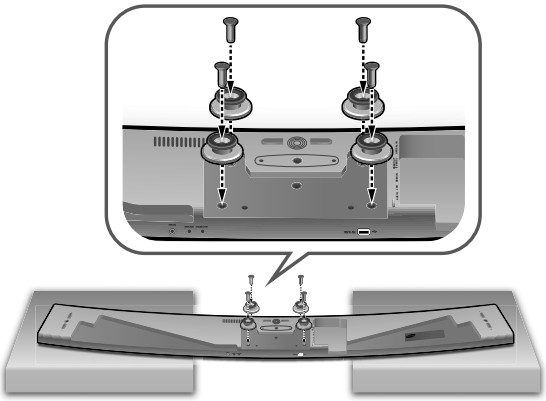

٣. اربط **برغي الحامل 1** وأربعة من **برغي الحامل 2** بالأربع فتحات الموجودة في Soundbar، كما هو موضح في الرسم التوضيحي.

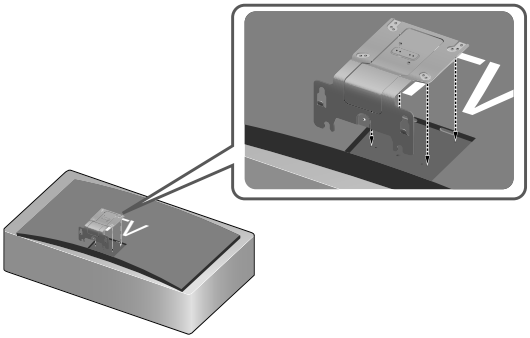

٤. إذا قمت بتركيب Soundbar على تلفزيون سامسونج مطابق، استخدم الدليل المرفق بالتلفزيون لوضع **تركيب التلفزيون** بأمان

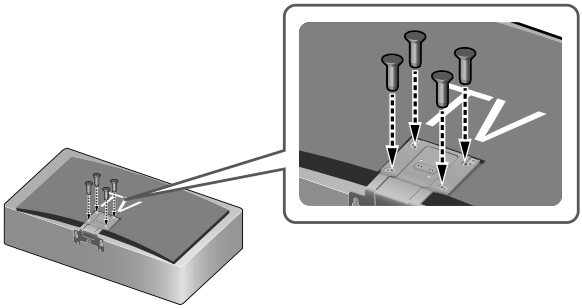

٥. اربط ر**تركيب التلفزيون** بالتلفزيون باستخدام الـ ٤ **برغي الحامل 2** المتبقية.

٦. بعد إرفاق **تركيب التلفزيون**، قم بتركيب التلفزيون على الحائط.

قاعدة Soundbar

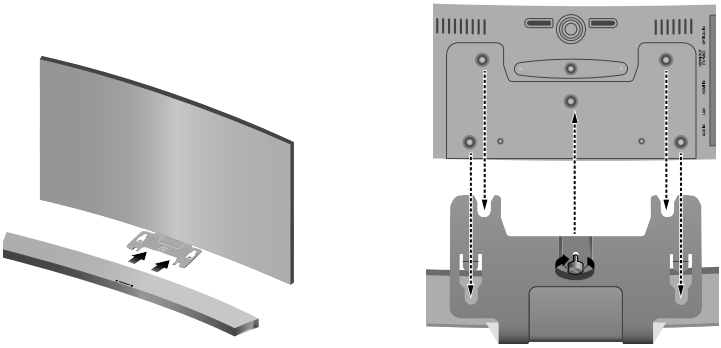

تم إرفاق قاعدة التلفزيون بـ **تركيب التلفزيون**

٧. ادفع Soundbar على **تركيب التلفزيون** بقدر المستطاع، كما هو موضح في الرسم التوضيحي.

٨. اربط **رف تثبيت الحامل** بجهاز Soundbar لتثبيت Soundbar بـ **تركيب التلفزيون**.

## تثبيت SOUNDBAR بحامل التلفزيون

يمكنك تثبيت Soundbar بحامل التلفزيون إذا كان لديك Soundbar مطابق للتلفزيون بهذا الطراز.

- إذا لم يتم إرفاق ر**ساق الحامل/دعامة الحامل**، قم بتنفيذ الخطوات التالية 1~3. إذا تم إرفاقهما، قم بتنفيذ الخطوة 4.

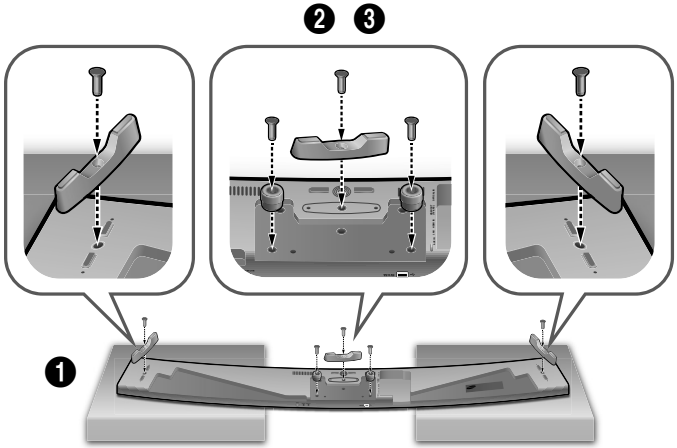


١. ضع جهاز Soundbar كما هو موضح بالرسم بحيث لا تلامس الأزرار السطح الموضوع عليه الجهاز.

٢. ثبت **ساق الحامل** (٣ لكل وحدة) و **برغي الحامل 2** (٣ لكل وحدة) بجهاز Soundbar كما هو موضح في الرسم التوضيحي.

٣. بنفس الطريقة، قم بتثبيت **دعامة الحامل** (٢ لكل وحدة) و **برغي الحامل 2** (٢ لكل وحدة) بـ Soundbar.

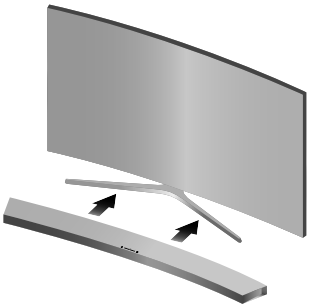

٤. قم بمحاذاة الجزء الأوسط من جهاز Soundbar بمنتصف قاعدة التلفزيون، ثم حركه عن آخره باتجاه الحامل، كما هو موضح في الرسم، ولكن توخ الحذر حينئذٍ. احذر الإخلال بتوازن التلفزيون.



- لا تضع أشياء ثقيلة ولا تقف على الوحدة الرئيسية.

## تثبيت SOUNDBAR بحامل حر

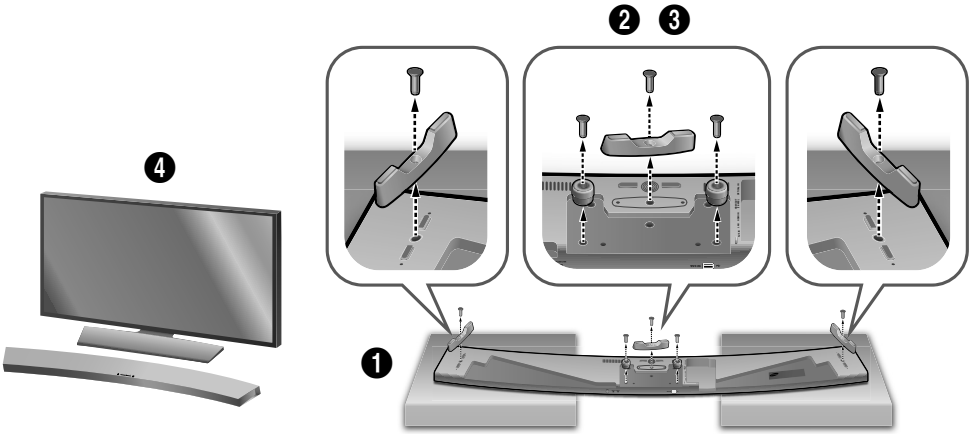


١. إذا تم إرفاق ر**ساق الحامل/دعامة الحامل**، ضع جهاز Soundbar أرضًا بحيث لا تلامس الأزرار الموجودة بالجهاز الأرض بشكل فعلي.
٢. قم بإزالة أ**رساق الحامل** (٣ لكل وحدة) و**برغي الحامل 2** (٣ لكل وحدة) من جهاز Soundbar كما هو موضح في الرسم التوضيحي.
٣. بنفس الطريقة، قم بإزالة **دعامة الحامل** (٢ لكل وحدة) و**برغي الحامل 2** (٢ لكل وحدة) من جهاز Soundbar.
٤. ضع جهاز Soundbar في المكان الذي تريده.

ARA

# تركيب سلك التثبيت

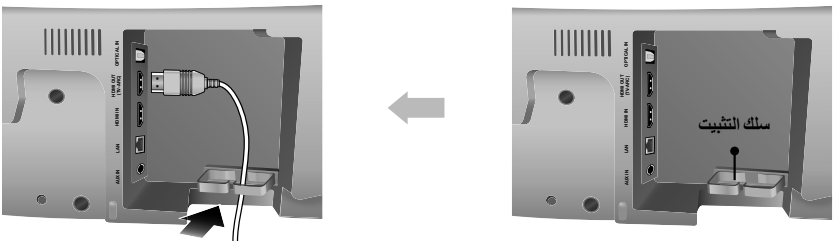


صِل سلك التثبيت بالوحدة، كما هو موضح، ثم مرّر الكابلات عبر سلك التثبيت للحفاظ على جمال المظهر.

# تركيب رجل الغطاء على مضخم الصوت

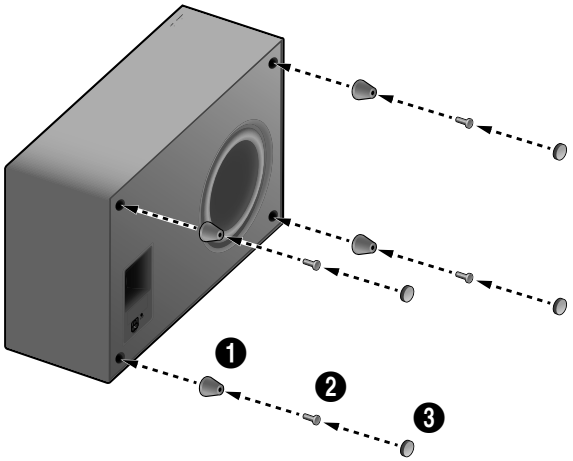


١. ضع كل **رجل الغطاء** على الـ ٤ فتحات في المقابل كما هو موضح في الرسم التوضيحي.

٢. أدخل **برغي-Taptite** (٤ لكل وحدة) في الفتحة المقابلة لـ **رجل الغطاء**.

٣. قم بسد الفتحات باستخدام **مطاط رجل التثبيت** (٤ لكل وحدة) للإكمال.

- لا تقم بتوصيل سلك التيار الكهربي الخاص بهذا المنتج أو جهاز التلفزيون بمنفذ التيار الكهربي الموجود بالحائط حتى إتمام كافة التوصيلات بين المكونات.
- قبل نقل هذا المنتج أو تركيبه، تأكد من إيقاف تشغيله وفصل سلك التيار الكهربي.

# توصيل مضخم الصوت

## توصيل مضخم الصوت تلقائيًا

يجب أن يتم توصل الوحدة الرئيسية ومضخم الصوت (توصيل لاسلكيًا) تلقائيًا عندما يتم تشغيل الوحدة الرئيسية ومضخم الصوت.

- عندما يتم التوصيل بالكامل، وتتوقف اللمبة الزرقاء بمضخم الصوت عن الوميض.

## توصيل مضخم الصوت يدويًا

وصلة تعريف مضخم الصوت تم ضبطها مسبقًا في المصنع ويجب أن يتم التوصيل (الاتصال اللاسلكي) بين الوحدة الأساسية والمضخم تلقائيًا عند تشغيل الوحدة الأساسية ومضخم الصوت. إذا كان مؤشر Link غير مضيء عند تشغيل الوحدة الرئيسية ومضخم الصوت، يرجى ضبط المعرف باتباع الإجراء أدناه. أكمل تلك العملية خلال ٣٠ ثانية بعد أن يبدأ مؤشر الربط الموجود على مضخم الصوت في الوميض.

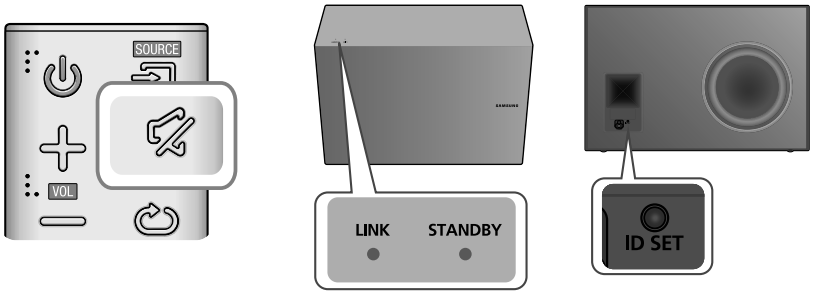


١. قم بتوصيل أسلاك التيار الكهربي الخاصة بالوحدة الأساسية ومضخم الصوت في مخرج التيار المتردد الموجود بالحائط.

٢. اضغط على زر **ID SET** الموجود في الجزء الخلفي من مضخم الصوت بأداة صغيرة مدببة لمدة ٥ ثوانٍ.

- سينطفئ مؤشر STANDBY (وضع الاستعداد) ويومض مؤشر LINK (اللمبة الزرقاء) بسرعة.

٣. عندما يتم فصل الطاقة في الوحدة الرئيسية (في وضع STANDBY)، اضغط مع الاستمرار على (كتم الصوت) الموجود على وحدة التحكم عن بعد لمدة خمس ثوانٍ.

٤. تظهر رسالة **ID SET** على شاشة Soundbar.

٥. لإتمام عملية الربط، قم بتشغيل الوحدة الأساسية أثناء وميض اللمبة الزرقاء الموجودة بمضخم الصوت.

- تمت عملية الربط (التوصيل) الآن بين الوحدة الرئيسية ومضخم الصوت.
- يجب أن يكون مؤشر الرابط (اللمبة الزرقاء) الموجود على مضخم الصوت مضيئًا.
- إذا لم يستمر مؤشر الرابط في الإضاءة باللون الأزرق، فذلك يعني فشل عملية الربط. أوقف تشغيل الوحدة الرئيسية وابدأ من الخطوة ٢ مرة أخرى.
- يمكنك الاستمتاع بالصوت المثالي من مضخم الصوت اللاسلكي من خلال اختيار المؤثرات الصوتية. (راجع صفحة ١٠)

- قبل نقل المنتج أو تركيبه، تأكد من إيقاف تشغيله وفصل سلك التيار الكهربي.
- إذا كانت الوحدة الأساسية مطفأة، سيكون مضخم الصوت اللاسلكي على وضع الاستعداد وستتم إضاءة STANDBY LED (لمبة وضع الاستعداد) بعد أن يومض مؤشر الرابط (اللمبة الزرقاء) لمدة ٣٠ ثانية.
- في حالة استخدامك لجهاز يستخدم نفس تردد Soundbar (٢,٤ جيجا هرتز) مثل بالقرب من النظام، ربما يحدث تداخل يؤدي إلى بعض التشويش على الصوت.
- مسافة الإرسال الخاصة بالإشارة اللاسلكية بين الوحدة الأساسية والمضخم تصل إلى ١٠ أمتار تقريبًا، ولكنها ربما تختلف وفقًا لبيئة التشغيل الخاصة بك. في حالة وجود حائط خرساني أو معدني صلب بين الوحدة الأساسية ومضخم الصوت اللاسلكي، ربما لا يعمل النظام على الإطلاق، لأن الإشارة اللاسلكية لا يمكنها اختراق المعادن.
- في حالة عدم قيام الوحدة الرئيسية بإنشاء اتصال لاسلكي، اتبع الخطوات من ١-٥ الموضحة بالصفحة السابقة لإعادة ضبط الاتصال بين الوحدة الرئيسية ومضخم الصوت اللاسلكي.

- هوائي الاستقبال اللاسلكي مدمج في مضخم الصوت اللاسلكي. حافظ على الوحدة بعيدًا عن المياه والرطوبة.
- للحصول على الصوت الأمثل، تأكد من خلو المنطقة المحيطة بمضخم الصوت اللاسلكي من العوائق.

# التوصيل بالتليفزيون

## الاتصال بالتلفزيون باستخدام كبل HDMI (رقمي)

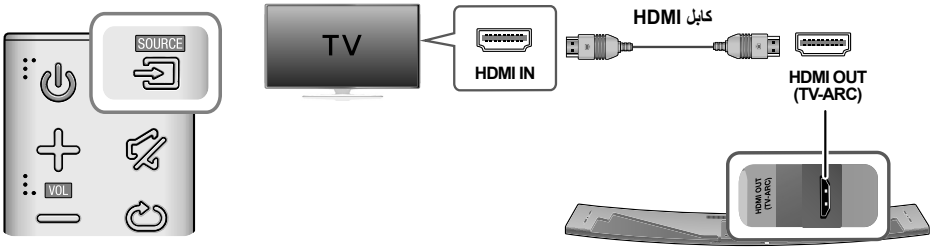


١. وصل كابل HDMI من مقبس **HDMI OUT (TV-ARC)** الموجود بالجزء الخلفي من المنتج بمقبس HDMI IN الموجود بالتلفزيون.

٢. اضغط على الزر ⮆ (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **D.IN**.

- يعد HDMI هو الوسيط الذي يتيح إمكانية الإرسال الرقمي لبيانات الصورة والصوت بموصل واحد فقط.
- في حالة وجود منفذ ARC بالتلفزيون، قم بتوصيل كابل HDMI بمنفذ HDMI IN (ARC).
- ينصح باستخدام كبل HDMI مجوف إن أمكن. عند استخدام كبل HDMI مصمت، فلتستخدم كبلا قطره أقل من 14 مم.
- يجب تشغيل وظيفة +Anynet.
- لن تكون هذه الوظيفة متاحة إذا كان كبل HDMI لا يدعم ARC.

## الاتصال بالتلفزيون باستخدام كبل بصري (رقمي)

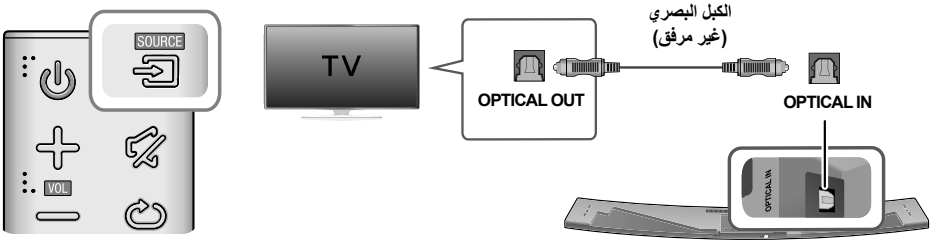


١. قم بتوصيل **OPTICAL IN** (الصوت) على Soundbar بمقبس OPTICAL OUT للتلفزيون

٢. اضغط على الزر ⮆ (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **D.IN**.

## ◄ Auto Power Link

عند توصيل الوحدة الرئيسية بجهاز تلفزيون عبر كبل بصري رقمي، اضبط وظيفة التشغيل التلقائي على تشغيل لتشغيل Soundbar تلقائيًا عند تشغيل التلفزيون.

| AUTO POWER LINK | العرض |
|---|---|
| تشغيل | **ON - ANYNET+ / OFF - POWER LINK** |
| إيقاف | **OFF - ANYNET+ / ON - POWER LINK** |

١. قم بتوصيل Soundbar والتلفزيون بكابل بصري. (غير مرفق)

٢. اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **D.IN**.

٣. اضغط على الزر **+Anynet** بوحدة التحكم عن بعد لتبديل تشغيل وإيقاف تشغيل الوظيفة Auto power Link.

- قد لا يعمل رابط التشغيل التلقائي تبعًا للجهاز الموصل.

# TV SOUNDCONNECT

يمكنك الاستمتاع بصوت التلفزيون من خلال توصيل نظام Soundbar بتلفزيون Samsung الذي يدعم وظيفة TV SoundConnect.

١. قم بتشغيل التلفزيون ونظام Soundbar.
- قم بتشغيل قائمة التلفزيون
- انتقل إلى إعدادات السماعة من علامة التبويب "الصوت".
- اضبط القائمة "إضافة جهاز جديد" على "تشغيل".

٢. اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **TV**.

٣. تظهر رسالة على التلفزيون للسؤال عن الرغبة في تمكين وظيفة TV SoundConnect من عدمه.

٤. حدد الخيار <**نعم**> لإتمام توصيل التلفزيون و Soundbar من خلال وحدة التحكم عن بُعد بالتلفزيون.

- تحويل وضع نظام Soundbar من تلفزيون إلى آخر سيوقف تلقائيًا وظيفة TV SoundConnect.
- لتوصيل جهاز Soundbar بتلفزيون آخر، يجب إنهاء الاتصال الحالي.
- قم بإيقاف التوصيل بالتلفزيون الحالي، ثم اضغط على زر ►II الموجود بوحدة التحكم عن بعد لمدة ٥ ثواني للتوصيل بجهاز تلفزيون آخر.

- وظيفة (SoundShare) TV SoundConnect مدعومة من بعض تلفزيونات Samsung ابتداءً من طراز عام 2012. تحقق مما إذا كان التلفزيون الذي تستخدمه يدعم وظيفة (SoundShare) TV SoundConnect قبل البدء. (للمزيد من التفاصيل، يرجى الرجوع إلى دليل المستخدم الخاص بجهاز التلفزيون.)
- إذا كان جهاز تلفزيون Samsung الخاص بك من طراز قبل عام 2014، راجع قائمة إعداد SoundShare.
- إذا كانت المسافة بين جهاز التلفزيون وجهاز Soundbar تزيد عن 10 أمتار فقد لا يكون الاتصال مستقرًا أو قد يحدث تقطيع في الصوت. في حالة حدوث ذلك، قم بتغيير مكان التلفزيون أو جهاز Soundbar بحيث يصبحان في نطاق التشغيل، ثم أعد إنشاء الاتصال بوظيفة TV SoundConnect.
- نطاق تشغيل TV SoundConnect
  - نطاق الاقتران الموصى به: في نطاق 2 متر
  - نطاق التشغيل الموصى به: في نطاق 10 أمتار
- الأزرار "تشغيل/إيقاف مؤقت" و"التالي والسابق" في جهاز Soundbar أو في وحدة التحكم عن بعد في جهاز Soundbar لا تتحكم في لا تتحكم في التلفزيون.

ARA

# التوصيلات بجهاز خارجي

## كابل HDMI

يعد HDMI الواجهة الرقمية القياسية للتوصيل بتلك الأجهزة مثل أجهزة التلفزيون، أجهزة العرض، مشغلات DVD، مشغلات Blu-ray، وأجهزة الاستقبال الرقمي set top boxes، وغيرها.
يمنع كابل HDMI أي تشويش في الإشارة بسبب التحويل إلى تناظري ويحافظ على جودة الصوت والفيديو الخاصة بالمصدر الرقمي الأصلي.

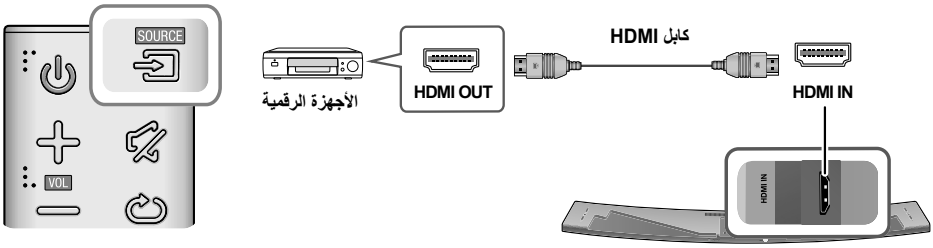


١. قم بتوصيل كبل HDMI من مقبس **HDMI IN** الموجود بالجزء الخلفي من المنتج بمقبس HDMI OUT الموجود بأجهزتك الرقمية.

٢. اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **HDMI**.

## كابل بصري أو AUX

تأتي هذه الوحدة مزودة بمقبس إدخال رقمي بصري ومقبس إدخال صوت تناظري، مما يقدم لك طريقتين لتوصيله بأجهزة خارجية.

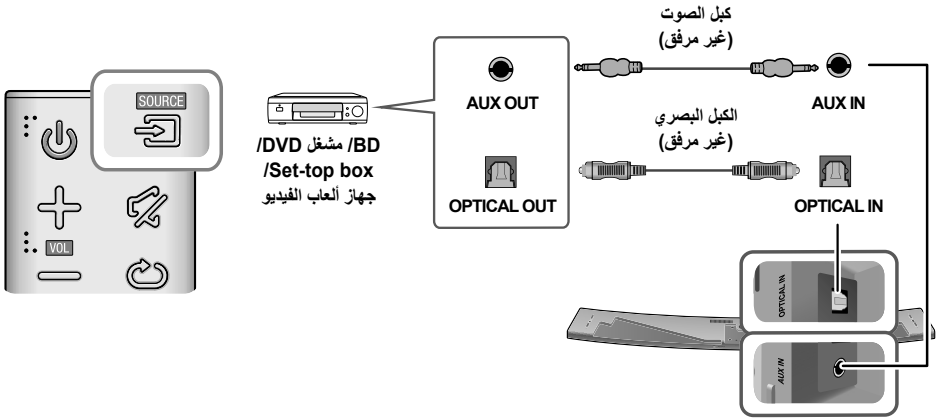

### ◄ كابل AUX

١. قم بتوصيل مدخل **AUX IN** (الصوت) بالوحدة الرئيسية لمقبس AUDIO OUT للجهاز المصدر.

٢. اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **AUX**.

### ◄ الكبل البصري

١. قم بتوصيل مدخل **OPTICAL IN** (الصوت) بالوحدة الرئيسية لمقبس OPTICAL OUT للجهاز المصدر.

٢. اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **D.IN**.

## USB

يمكنك تشغيل ملفات الموسيقى الموجودة على أجهزة تخزين USB عن طريق Soundbar.

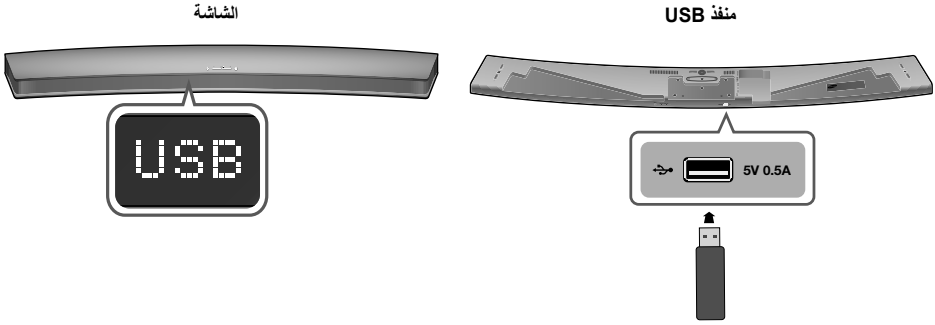


١. قم بتوصيل جهاز USB بمنفذ USB الخاص بالمنتج.

٢. اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **USB**.

٣. تظهر كلمة **USB** على شاشة العرض.

- اكتمل توصيل جهاز Soundbar بجهاز USB.
- يتم إيقاف التشغيل تلقائيًا (Auto Power Off) في حالة عدم توصيل جهاز USB لمدة تزيد عن ١٥ دقيقة.

### ◄ قبل قيامك بتوصيل جهاز USB

انتبه لما يلي:

- في حالة تجاوز اسم الملف الموجود في جهاز USB ١٠ أحرف، لا يتم عرضه على شاشة Soundbar.
- هذا المنتج ربما لا يكون متوافقًا مع بعض أنواع وسائط تخزين USB.
- أنظمة الملفات FAT16 و FAT32 مدعومة.
  - نظام الملفات NTFS غير مدعوم.
- قم بتوصيل جهاز USB مباشرة بمنفذ USB الخاص بالمنتج. خلافًا لذلك، ربما تصادف مشكلة في توافق USB.
- لا تقم بتوصيل عدة وحدات تخزين بالمنتج عبر قارئ بطاقات متعدد. فربما لا يعمل بشكل صحيح.

- بروتوكولات PTP الخاصة بالكاميرا الرقمية غير مدعومة.
- لا تقم بإخراج جهاز USB أثناء نقله للبيانات.
- لن يتم تشغيل ملفات الموسيقى (بتنسيقي MP3 وWMA) المحمية بواسطة DRM المنزَّلة من المواقع الإلكترونية التجارية.
- محركات الأقراص الصلبة (HDDs) الخارجية غير مدعومة.
- أجهزة الهاتف المحمول غير مدعومة.
- قائمة التوافق

| امتداد | نظام الترميز | معدل العينات | معدل البت |
|---|---|---|---|
| **mp3.*** | MPEG 1 Layer1 | 48/44.1/32 | 32 ~ 448 كيلو بايت في الثانية |
| | MPEG 1 Layer2 | 48/44.1/32 | 32 ~ 384 كيلو بايت في الثانية |
| | MPEG 1 Layer3 | 48/44.1/32 | 32 ~ 320 كيلو بايت في الثانية |
| | MPEG 2 Layer3 | 48/44.1/32/24/22.05/16 | 8 ~ 160 كيلو بايت في الثانية |
| | MPEG 2.5 Layer3 | 48/44.1/32/24/22.05/16/12/11.025/8 | 8 ~ 160 كيلو بايت في الثانية |
| **wma.*** | Wave_Format_MSAudio1 | - | - |
| | Wave_Format_MSAudio2 | - | - |
| | WMA Professional | غير مدعوم | - |
| **wav.*** | - | 192KHz ~ 8KHz | ~ 8.8 كيلو بايت في الثانية |
| **ogg.*** | - | 48KHz ~ 8KHz | - |
| **flac.*** | - | 192KHz ~ 8KHz | ~ 5.6 كيلو بايت في الثانية |
| **m4a.*** | Alac (Apple lossless Audo codec) | 192KHz ~ 8KHz | ~ 1 كيلو بايت في الثانية |
| **aif.*** | تنسيق ملف صوت تبادلي | 192KHz ~ 8KHz | ~ 4.4 كيلو بايت في الثانية |

- عند وجود مجلدات وملفات كثيرة مخزنة على جهاز USB، تستغرق القراءة بعض الوقت.

# وضع الإدخال

اضغط على الزر (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد الوضع المرغوب.

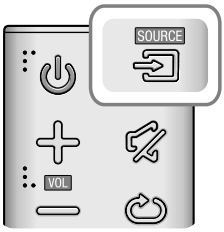


| وضع الإدخال | الشاشة |
|---|---|
| المدخل الرقمي البصري<br>مدخل ARC (HDMI OUT) | **D.IN** |
| مدخل AUX | **AUX** |
| مدخل HDMI | **HDMI** |
| وضع BLUETOOTH | **BT** |
| TV SoundConnect | **TV** |
| وضع USB | **USB** |

يتم إيقاف تشغيل الوحدة تلقائيًا في الحالات التالية:

- وضع ARC/USB/TV/BT/HDMI/D.IN
  - في حالة عدم صدور إشارة صوتية لمدة ١٥ دقيقة.
- وضع AUX

لتشغيل وظيفة Auto Power Down من أجل ON أو OFF، اضغط مع الاستمرار على الزر ⏯ لمدة ٥ ثوانٍ.
يظهر **OFF - AUTO POWER DOWN / ON - AUTO POWER DOWN** على الشاشة.

  - إذا لم يكن كابل AUX متصلاً لمدة ١٥ دقيقة.
  - في حالة عدم الضغط على أي مفتاح لمدة ٨ ساعات أثناء توصيل كبل AUX.

ARA

# BLUETOOTH

يمكنك توصيل جهاز بلوتوث بجهاز Soundbar والاستمتاع بسماع الموسيقى بصوت استريو عالي الجودة، بدون توصيلات سلكية!

## لتوصيل نظام SOUNDBAR بجهاز بلوتوث

تأكد من أن جهاز البلوتوث يدعم تشغيل سماعة الاستريو المتوافقة مع البلوتوث.

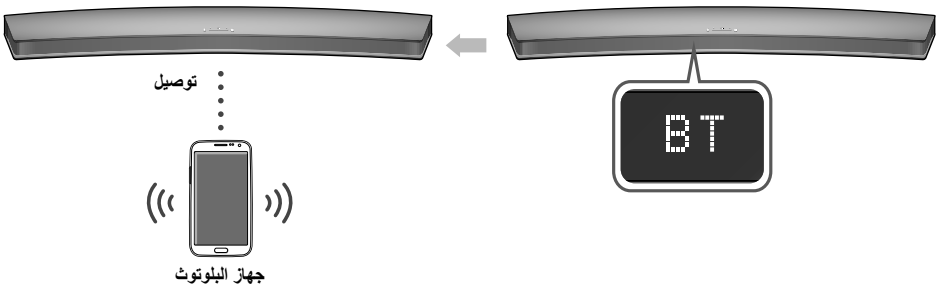


١. اضغط على الزر ⮆ (المصدر) الموجود باللوحة العليا للوحدة الرئيسية أو زر **SOURCE** الموجود بوحدة التحكم عن بعد لتحديد وضع **BT**.

- سترى **BT READY** على الشاشة الأمامية لنظام Soundbar.

٢. اختر قائمة البلوتوث من جهاز البلوتوث الذي ترغب في توصيله. (راجع دليل المستخدم الخاص بجهاز البلوتوث.)

٣. اختر **"[Samsung] HW-Jxxxx"** من القائمة.

- عند توصيل Soundbar بجهاز البلوتوث، سيعرض **[اسم جهاز البلوتوث] ← BT** على الشاشة الأمامية.
- يمكن عرض اسم الجهاز باللغة الإنجليزية فقط. سيتم عرض " _ " وتحته خط إذا لم يكن اسم الجهاز باللغة الإنجليزية.
- في حالة فشل جهاز البلوتوث في الاقتران بنظام Soundbar، قم بحذف **"[Samsung] HW-Jxxxx"** التي تم العثور عليها من قبل جهاز البلوتوث وقم بالبحث عن نظام Soundbar مرة أخرى.

٤. قم بتشغيل ملفات الموسيقى على الجهاز الذي تم توصيله.

- يمكنك الاستماع إلى الموسيقى على جهاز البلوتوث المتصل عبر نظام Soundbar.
- في وضع **BT**، لا تتوافر وظائف التشغيل/الإيقاف المؤقت/التالي/السابق. مع ذلك، تتوافر هذه الوظائف في أجهزة Bluetooth التي تدعم وظيفة (AVRCP).

---

- إذا طلب منك رقم PIN عند الاتصال بجهاز البلوتوث، أدخل <0000>.
- لا يمكن إقران أكثر من جهاز بلوتوث في نفس الوقت.
- سيتم إلغاء اتصال البلوتوث عند إيقاف نظام Soundbar.
- لا يمكن أن يُجري جهاز Soundbar البحث عن Bluetooth أو الاتصال بها بشكل صحيح تحت أي من الظروف التالية:
  - في حالة وجود مجال كهربي قوي حول نظام Soundbar.
  - في حالة إقران عدة أجهزة بلوتوث مع نظام Soundbar في نفس الوقت.
  - في حالة إيقاف تشغيل جهاز بلوتوث، عدم وضعه في المكان المناسب، أو وجود أعطال.
  - لاحظ أن أجهزة مثل أفران الميكروويف، محولات وصلات LAN اللاسلكية، مصابيح الفلوريسنت، وأفران الغاز تستخدم نفس نطاق التردد الذي يستخدمه جهاز البلوتوث، مما قد يتسبب في حدوث تداخل كهربي.

- يدعم نظام Soundbar بيانات SBC (٤٤,١ كيلو هرتز، ٤٨ كيلو هرتز).
- قم بالتوصيل فقط بجهاز بلوتوث يدعم وظيفة A2DP (الصوت والصورة).
- لا يمكنك توصيل جهاز Soundbar بجهاز Bluetooth يدعم فقط وظيفة HF (Hands Free).
- بمجرد إقران جهاز Soundbar بجهاز Bluetooth، يؤدي تحديد **"[Samsung] HW-Jxxxx"** من قائمة الأجهزة التي تم فحصها إلى تحويل جهاز Soundbar تلقائيًا إلى وضع **BT** .
- تتوفر فقط إذا كان نظام Soundbar مدرج في قائمة الأجهزة المقترنة بجهاز البلوتوث. (يجب اقتران نظام Soundbar وجهاز البلوتوث لمرة واحدة على الأقل قبل ذلك الوقت.)
- سيظهر نظام Soundbar في قائمة البحث عن الأجهزة في جهاز البلوتوث فقط عندما يعرض نظام Soundbar رسالة **BT READY**.
- في وضع SoundConnect TV، لا يمكن اقتران نظام Soundbar بجهاز بلوتوث آخر.

## لفصل جهاز البلوتوث من نظام SOUNDBAR

يمكنك فصل جهاز البلوتوث من نظام Soundbar. للاطلاع على التعليمات، راجع دليل المستخدم الخاص بجهاز البلوتوث.

- سيتم فصل نظام Soundbar.
- عند فصل نظام Soundbar عن جهاز البلوتوث، ستظهر على شاشة نظام Soundbar رسالة **BT DISCONNECTED** على الشاشة الأمامية.

## لفصل نظام SOUNDBAR عن جهاز البلوتوث

اضغط على زر **SOURCE** الموجود بوحدة التحكم عن بعد أو على زر (المصدر) الموجود باللوحة الأمامية العلوية للتحويل من وضع **BT** إلى وضع آخر أو إيقاف تشغيل نظام Soundbar.

- سيستغرق جهاز البلوتوث المتصل مدة معينة حتى يستجيب لنظام Soundbar قبل فصل الاتصال.
(ربما يختلف الوقت المطلوب لفصل الاتصال، وفقا لنوع جهاز البلوتوث)

- في وضع توصيل البلوتوث، سينقطع الاتصال بالبلوتوث في حال تخطت المسافة بين نظام Soundbar وجهاز البلوتوث ١٠ أمتار.
- يتم إيقاف تشغيل نظام Soundbar تلقائيًا بعد ١٥ دقيقة في حالة Ready (التأهب).

### ◄ المزيد حول Bluetooth

يعتبر البلوتوث تقنية تتيح إمكانية ربط الأجهزة المتوافقة مع البلوتوث بسهولة مع بعضها البعض من خلال اتصال لاسلكي قصير المدى.

- ربما يتسبب جهاز البلوتوث في إحداث تشويش أو عطل، وفقًا للاستخدام، في حالة:
  - جزء من جسدك ملامسًا لنظام الاستقبال/الإرسال الخاص بجهاز البلوتوث أو نظام Soundbar.
  - يخضع الأمر للتردد الكهربي من العوائق الناتجة عن وجود حائط، زاوية، أو فواصل مكتبية.
  - التعرض لتداخل كهربي من أجهزة تستخدم نفس تردد النطاق بما في ذلك الأجهزة الطبية، أفران الميكروويف، ووصلات LAN اللاسلكية.
- قم بإقران نظام Soundbar مع جهاز البلوتوث عندما يكونان قريبين من بعضهما.
- كلما زادت المسافة بين نظام Soundbar وجهاز البلوتوث، كلما انخفضت الجودة.
في حالة تخطي المسافة للنطاق التشغيلي للبلوتوث، ينقطع الاتصال.
- في المناطق التي تتسم بضعف حساسية الاستقبال، ربما لا يعمل البلوتوث بالشكل المناسب.
- يعمل اتصال البلوتوث فقط عندما يكون قريبًا من المجموعة. يتم قطع الاتصال تلقائيًا في حال تخطت المسافة هذا النطاق. حتى ضمن هذا النطاق، ربما تتأثر جودة الصوت بسبب العوائق المتمثلة في الحوائط أو الأبواب.

# استخدام وظيفة NETWORK STANDBY ON

تصبح وظيفة Network Standby On متوفرة في حال إنشاء توصيل لاسلكي بشكل جيد بين الجهاز الذكي وSoundbar. تقوم هذه الوظيفة بتشغيل Soundbar تلقائيًا عندما يحاول جهاز ذكي الاتصال بـ Soundbar عبر تقنية Bluetooth أو Wi-Fi. إذا تم تشغيل Soundbar عبر الاتصال من خلال تقنية Bluetooth، يتم ضبط وضع الإدخال له على **BT** تلقائيًا. ولا يتوفر تشغيل Soundbar من خلال تقنية Wi-Fi فقط إلا عن طريق استخدام التطبيق. وللحصول على معلومات إضافية، ارجع إلى دليل الويب.

١. قم بتوصيل الجهاز الذكي بـ Soundbar الخاص بك.

٢. قم بتشغيل وظيفة Network Standby On بالضغط على الزر ⏭ بوحدة التحكم في Soundbar عن بعد لأكثر من ٥ ثوانٍ.
يمكنك إيقاف التشغيل بالضغط على الزر ⏭ مرة أخرى لأكثر من ٥ ثوانٍ.

---

- متوفرة فقط إذا كان Soundbar مدرجًا بين الأجهزة المقترنة بالجهاز الذكي.
(يجب اقتران الجهاز الذكي و Soundbar مسبقًا مرة واحدة على الأقل.)
- سيظهر نظام Soundbar في قائمة البحث عن الأجهزة في الجهاز الذكي فقط عندما يعرض نظام Soundbar رسالة [BT READY] أو [WiFi READY].
- في وضع SoundConnect TV، لا يمكن اقتران نظام Soundbar بجهاز ذكي آخر.
- إذا كانت وظيفة Network Standby On لا تعمل
  - يتم ضبط Network Standby On على إيقاف التشغيل.
- سيتم إنهاء الاتصال عبر تقنية Wi-Fi بـ Soundbar إذا تم فصل سلك التيار الكهربي الخاص به أو تم قطع التيار. قم بتشغيل Soundbar وأعد الاتصال.

---

# استخدام MULTIROOM LINK

بمجرد توصيل جهاز Soundbar بجهاز ذكي مزود Multiroom App، يمكنك توصيل أجهزة Samsung Multiroom متعددة معًا لاسلكيًا

## قبل البدء

### ◄ أساسيات الاتصال

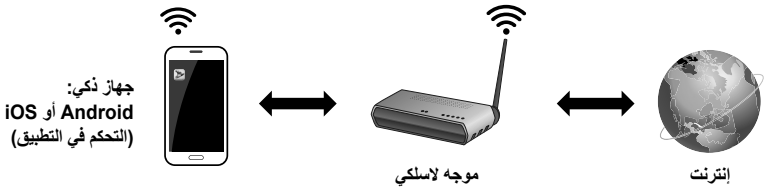


١. المتطلبات: موجه لاسلكي، جهاز ذكي

٢. يجب توصيل الموجه اللاسلكي بالإنترنت.

٣. يجب توصيل الجهاز الذكي بالموجه عن طريق وصلة Wi-Fi.

## تثبيت تطبيق SAMSUNG MULTIROOM

لاستخدام Soundbar، يجب أن تقوم بتنزيل وتثبيت تطبيق Samsung Multiroom عن طريق الوصول إلى التطبيق من خلال Google play أو App Store. وبتثبيت تطبيق Samsung Multiroom، يمكنك تشغيل الموسيقى المخزنة في جهازك الذكي، من الأجهزة المتصلة وغيرها من موفري المحتوى، ومن محطات راديو الإنترنت.

### ◄ Android أو iOS

قم بتنزيل تطبيق Samsung Multiroom من Google play أو App Store الخاص بجهازك الذكي.

* البحث في السوق: Samsung Multiroom

أو

### ◄ الدخول على تطبيق Samsung Multiroom

للوصول إلى تطبيق Samsung Multiroom، اضغط على أيقونة تطبيق Multiroom بجهازك الذكي.

## توصيل SOUNDBAR بالشبكة

من جهازك الذكي، حدد تطبيق Samsung Multiroom.
اتبع التعليمات التي تظهر على شاشة الجهاز الذكي.

- للمزيد من المعلومات، يرجى الرجوع إلى دليل الويب.
  - الدليل القائم على الويب : www.Samsung.com ← Support ← البحث عن اسم المنتج ← تنزيل الملف HW-J8501.
- عند التوصيل بشبكة سلكية، حاول استخدام كابل CAT 7 للتوصيل.

# تحديث برامج التشغيل

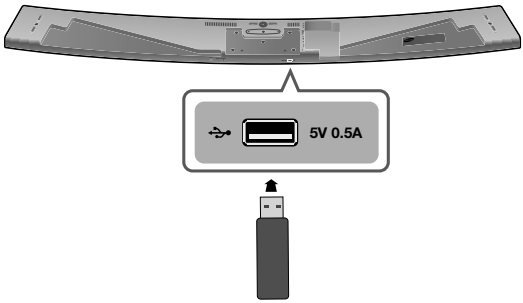


## التحديث باستخدام USB

قد توفر Samsung تحديثات للبرنامج الثابت لنظام Soundbar في المستقبل.

عند توافر التحديث، يمكنك تحديث البرنامج الثابت من خلال توصيل جهاز USB الذي يحتوي على تحديث البرنامج الثابت بمنفذ USB الموجود بـ Soundbar.

لاحظ أنه في حالة وجود عدة ملفات للتحديث، يتعين عليك تحميل كل ملف بمفرده على جهاز USB واستخدام ملفًا في كل مرة لتحديث البرنامج الثابت.

يرجى زيارة الموقع الإلكتروني Samsung.com أو الاتصال بمركز خدمة العملاء بشركة سامسونج للتعرف على المزيد من المعلومات المتعلقة بتنزيل ملفات التحديث.

١. قم بتوصيل جهاز تخزين USB الذي يحتوي على البرنامج الثابت الحديث بمنفذ Soundbar USB.

٢. افصل سلك التيار الكهربي، وأعد توصيله وقم بتشغيله.

٣. قم بتشغيل **UPDATE** Soundbar التي تظهر على الشاشة فيبدأ التحديث خلال ٣ دقائق.

- عند الانتهاء من التحديث، يتوقف تشغيل Soundbar تلقائيًا.

### ◄ إذا لم يتم عرض UPDATE

١. أوقف تشغيل Soundbar، وقم بتوصيل جهاز تخزين USB الذي يحتوي على ملفات التحديث لمنفذ USB بمضخم الصوت.

٢. افصل سلك التيار الكهربي، وأعد توصيله وقم بتشغيله.

---

- أدخل جهاز USB يحتوي على ترقية البرنامج الثابت بمنفذ USB على الوحدة الرئيسية.
- قد لا يعمل تحديث البرامج الثابتة بشكل مناسب إذا كانت الملفات الصوتية المدعومة من Soundbar مخزنة في جهاز تخزين USB.
- يرجى عدم فصل التيار الكهربي أو إزالة جهاز USB عندما تكون التحديثات قيد التطبيق. سيتم إيقاف تشغيل الوحدة الرئيسية تلقائيًا بعد اكتمال تحديث البرنامج الثابت.

- بعد التحديث، تتم إعادة تعيين الإعدادات إلى إعدادات المصنع الافتراضية. نقترح تدوين الإعدادات الخاصة بك حتى يمكنك إعادة ضبطها بسهولة بعد الانتهاء من عملية التحديث.
  لاحظ أن تحديث البرامج الثابتة يعيد ضبط اتصال مضخم الصوت أيضًا. إذا لم تتم إعادة إنشاء الاتصال بمضخم الصوت تلقائيًا بعد التحديث، فراجع صفحة ١٦.
  إذا فشلت عملية تحديث البرنامج الثابت، فإننا ننصح بتهيئة جهاز USB في FAT16 وإعادة المحاولة.
- لا تقم بتهيئة جهاز USB بتهيئة NTFS. لا يدعم جهاز Soundbar نظام ملفات NTFS.
- وفقًا لجهة التصنيع، ربما يكون محرك USB غير مدعومًا.

## تحديث تلقائي

حتى عند إيقاف تشغيل Soundbar، سيقوم تلقائيًا بفحص إصدار البرنامج الأحدث ويواصل التحديث إذا كان متصلاً بالإنترنت.

- تتم تهيئة Soundbar لإجراء التحديث التلقائي بشكل افتراضي.
- لاستخدام وظيفة التحديث التلقائي، ينبغي أن يكون Soundbar متصلاً بالإنترنت.
- سيتم إنهاء الاتصال عبر تقنية Wi-Fi بـ Soundbar إذا تم فصل سلك التيار الكهربي الخاص به أو تم قطع التيار. قم بتشغيل Soundbar وأعد الاتصال.

# استكشاف الأعطال وإصلاحها



قبل طلب الخدمة، يرجى التأكد مما يلي.

| **لا يمكن تشغيل الوحدة.** | |
|---|---|
| ← قم بتوصيل قابس التيار الكهربي في المنفذ. | • هل تم توصيل سلك التيار الكهربي في منفذ التيار الكهربي؟ |

| **الوظيفة لا تعمل عند الضغط على الزر الخاص بها.** | |
|---|---|
| ← افصل قابس التيار الكهربي وقم بتوصيله مرة أخرى. | • هل توجد شحنة كهرباء استاتيكية في الهواء؟ |

| **الجهاز لا يصدر صوتًا.** | |
|---|---|
| ← اضغط على زر (كتم الصوت) لإيقاف تشغيل الوظيفة. | • هل قمت بتشغيل وظيفة كتم الصوت؟ |
| ← اضبط مستوى الصوت. | • هل تم ضبط مستوى الصوت على الحد الأدنى؟ |

| **وحدة التحكم عن بعد لا تعمل.** | |
|---|---|
| ← استخدم بطاريات جديدة. | • هل يوجد ارتشاح بالبطاريات؟ |
| ← اقترب من الوحدة. | • هل المسافة بين وحدة التحكم عن بعد والوحدة الأساسية كبيرة جدًا؟ |

| **تعذر TV SoundConnect (اقتران التلفزيون).** | |
|---|---|
| ← وظيفة TV SoundConnect مدعومة من بعض طرازات تلفزيون Samsung المصنعة بعد عام 2012. افحص تلفزيونك للتأكد مما إذا كان يدعم TV SoundConnect. | • هل جهاز التلفزيون الخاص بك يدعم TV SoundConnect؟ |
| ← قم بتحديث تلفزيونك بأحدث إصدارات البرنامج الثابت. | • هل البرنامج الثابت الخاص بتلفزيونك أحدث إصدار؟ |
| ← اتصل بمركز خدمة عملاء سامسونج. | • هل يحدث خطأ عند التوصيل؟ |
| ← اضغط مع الاستمرار على زر ▶II لمدة ٥ ثواني لإعادة ضبط TV SoundConnect. | • أعد ضبط وضع TV وقم بتوصيلها مرة أخرى. |

| **يومض المؤشر الأحمر الموجود بمضخم الصوت ومضخم الصوت لا يصدر صوتًا.** | |
|---|---|
| ← حاول توصيل مضخم الصوت مرة أخرى. (راجع صفحة ١٦) | • قد لا يكون مضخم الصوت متصلاً بالهيكل الرئيسي للمنتج. |

| **مضخم الصوت يُصدر طنينًا ويهتز بشكل ملحوظ.** | |
|---|---|
| ← اضغط على زر **WOOFER** الموجود في وحدة التحكم عن بعد لضبط القيمة (بين 12-، 6- إلى 6+) | • حاول ضبط اهتزاز مضخم الصوت. |

# المواصفات

| اسم الطراز | HW-J8501 |
|---|---|

| | | | |
|---|---|---|---|
| عام | USB | | 5 فولت/ 0.5 أمبير |
| | الوزن | الوحدة الأساسية | 5 كجم |
| | | مضخم الصوت (PS-WJ8501) | 10.6 كجم |
| | الأبعاد (العرض × الارتفاع × العمق) | الوحدة الأساسية | 1450 × 60 × 185 ملم |
| | | مضخم الصوت (PS-WJ8501) | 500 × 332 × 181 ملم |
| | درجة الحرارة المناسبة للتشغيل | | من 5+ درجات مئوية إلى 35+ درجة مئوية |
| | درجة الرطوبة المناسبة للتشغيل | | 10% إلى 75% |
| المكبر | معدل طاقة الخرج | الوحدة الأساسية | 21 وات/قناة x 9، 8 أوم، التشويش التوافقي الكلي (THD) = 10%، 1 كيلو هرتز |
| | | مضخم الصوت (PS-WJ8501) | 161 وات، 3 أوم، التشويش التوافقي الكلي (THD) = 10%، 100 هرتز |
| | نسبة الإشارة إلى الضجيج (الدخل التناظري) | | 65 ديسيبل |
| | الفاصل (1 كيلو هرتز) | | 65 ديسيبل |

* نسبة الإشارة إلى الضجيج، التشويش، الفاصل والحساسية القابلة للاستعمال تكون على أساس المعايير التي تستخدم توجيهات AES (جمعية الهندسة الصوتية).
* المواصفات الاسمية
  - تحتفظ شركة سامسونج إلكترونيكس المحدودة بالحق في تعديل المواصفات دون إخطار.
  - قيم الوزن والأبعاد تقريبية.
  - للاطلاع على مصدر الطاقة واستهلاك الطاقة، راجع الملصق المرفق مع المنتج.

※ **إشعار ترخيص المصدر المفتوح**

- لإرسال الاستفسارات والطلبات المتعلقة بالمصادر المفتوحة، يرجى الاتصال بشركة Samsung عبر البريد الإلكتروني (oss.request@samsung.com).

© 2015 Samsung Electronics Co., Ltd. All rights reserved.

## Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

حقوق النشر © لعام 2015 لشركة Samsung Electronics Co., Ltd. جميع الحقوق محفوظة.

## اتصل بـ SAMSUNG WORLD WIDE

إذا كان لديك أية استفسارات أو تعليقات تتعلق بمنتجات Samsung، فيرجى الاتصال بمركز رعاية عملاء SAMSUNG.

| Web Site | ☎ Contact Centre | Area |
|---|---|---|
| | | Africa ▪ |
| www.samsung.com/support | 0860 SAMSUNG (726 7864) | SOUTH AFRICA |
| | 8007260000 | BOTSWANA |
| | 08 197 267 864 | NAMIBIA |
| | 0211 350370 | ZAMBIA |
| | 23052574020 | MAURITIUS |
| | 262508869 | REUNION |
| | 847267864 / 827267864 | MOZAMBIQUE |
| www.samsung.com/africa_en/support | 0800-726-7864 | NIGERIA |
| | 0800-10077<br>0302-200077 | GHANA |
| www.samsung.com/africa_fr/support | 8000 0077 | COTE D'IVOIRE |
| | 800-00-0077 | SENEGAL |
| | 7095-0077 | CAMEROON |
| www.samsung.com/support | 0800 545 545 | KENYA |
| | 0800 300 300 | UGANDA |
| | 0800 755 755 /<br>0685 889 900 | TANZANIA |
| | 9999 | RWANDA |
| | 200 | BURUNDI |
| | 499999 | DRC |
| | 1969 | SUDAN |

| Web Site | ☎ Contact Centre | Area |
|---|---|---|
| | | Middle East ▪ |
| www.samsung.com/eg/support | 08000-7267864<br>16580 | EGYPT |
| www.samsung.com/n_africa/support | 021 36 11 00 | ALGERIA |
| www.samsung.com/iran/support | 021-8255 | IRAN |
| www.samsung.com/sa/support<br>www.samsung.com/sa_en/support (English) | 8002474357 | SAUDI ARABIA |
| www.samsung.com/pk/support | 0800-Samsung (72678) | PAKISTAN |
| www.samsung.com/n_africa/support | 80-1000-12 | TUNISIA |
| www.samsung.com/ae/support (English)<br>www.samsung.com/ae_ar/support (Arabic) | 800-SAMSUNG<br>(800 - 726 7864) | U.A.E |
| | 800-SAMSUNG<br>(800 - 726 7864) | OMAN |
| | 183-CALL (183-2255) | KUWAIT |
| | 8000-GSAM (8000-4726) | BAHRAIN |
| | 800-CALL (800-2255) | QATAR |
| www.samsung.com/tr/support | 444 77 11 | TURKEY |
| www.samsung.com/Levant/support (English) | 0800-22273<br>06 5777444 | JORDAN |
| | 18252273 | SYRIA |
| www.samsung.com/n_africa/support | 080 100 22 55 | MOROCCO |